

WARNING: HIGH VOLTAGE CAUTION DO NOT OPERATE WITHOUT WATER ON POWER ON WITHOUT WATER FLOW MAY CAUSE DAMAGE TO CONTROL. TURN POWER OFF WHEN CONTROL IS NOT IN USE.

CAUTION Control Shipped Wired for 460 VAC Unless otherwise specified - See Note 2.

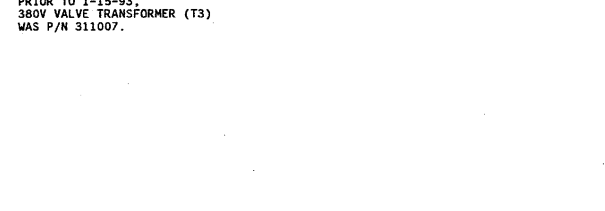
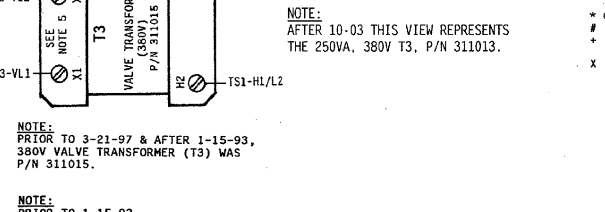
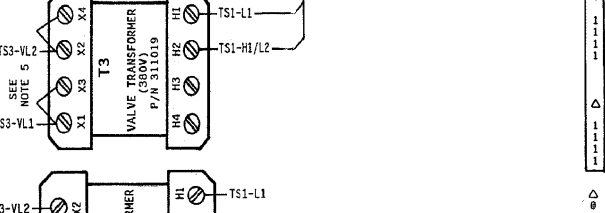
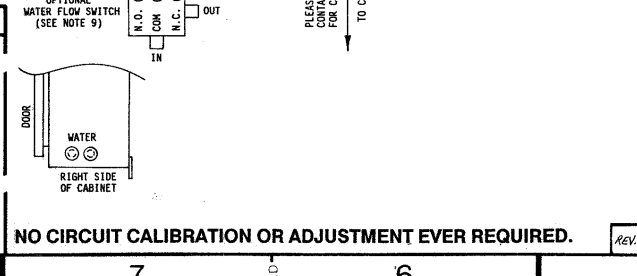
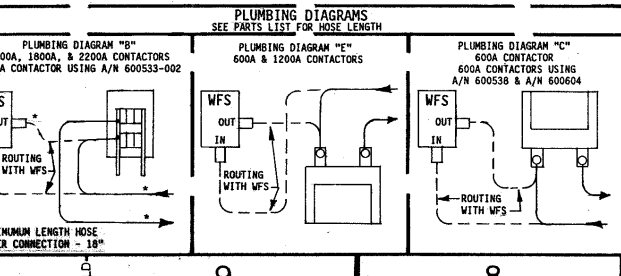
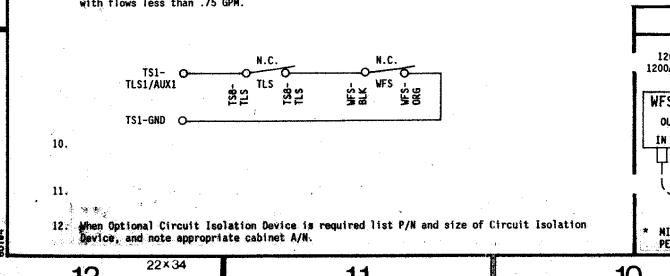
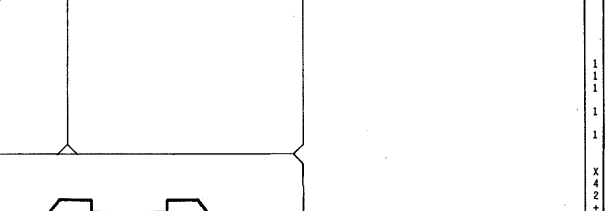
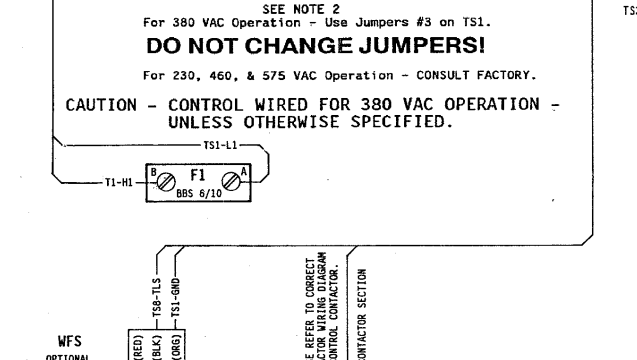
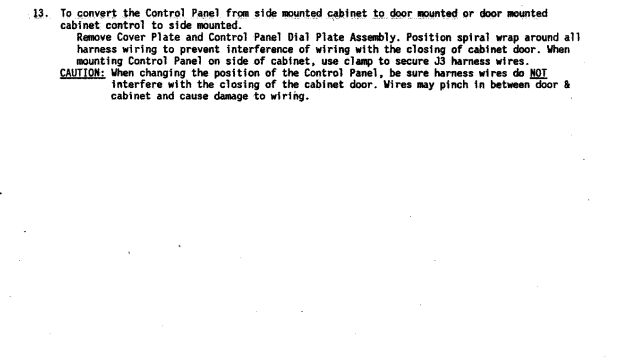
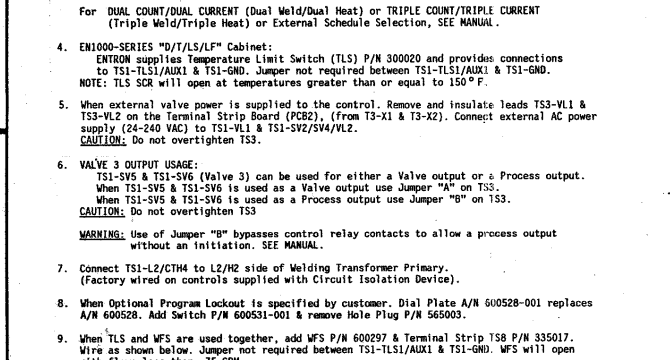
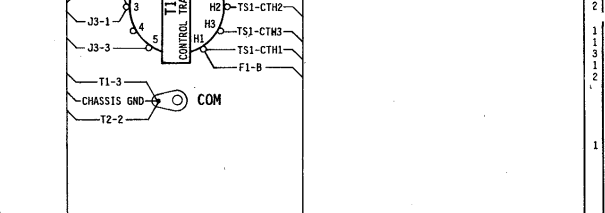
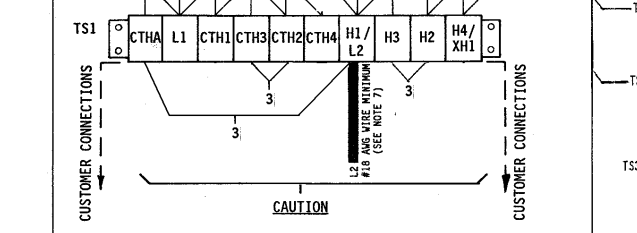
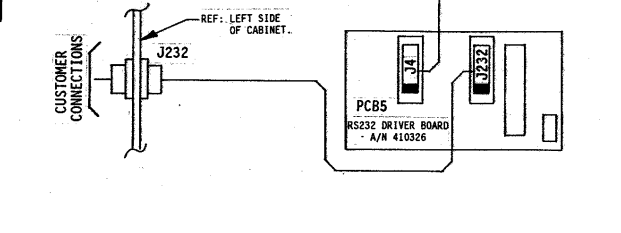
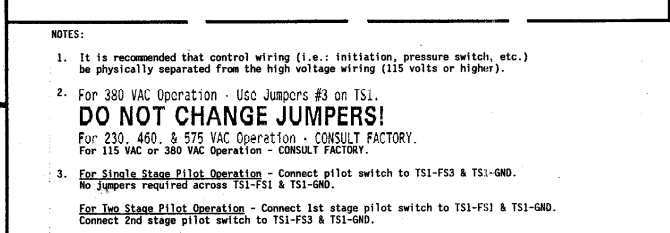
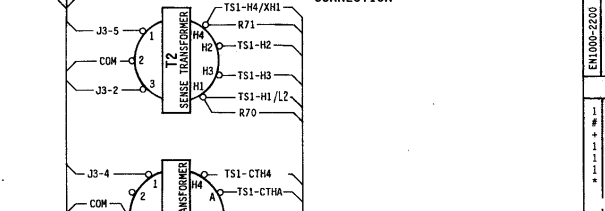
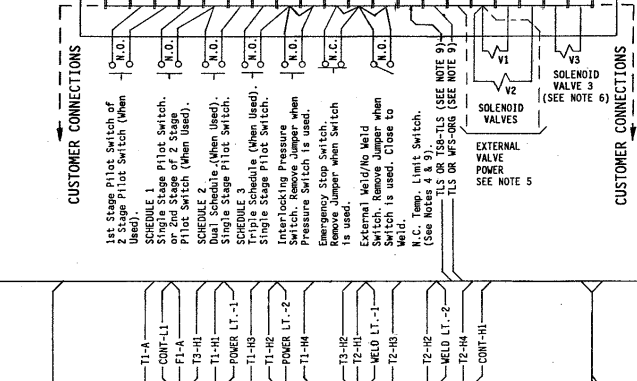
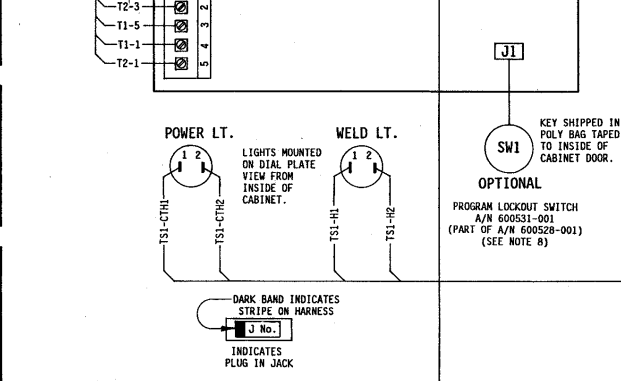
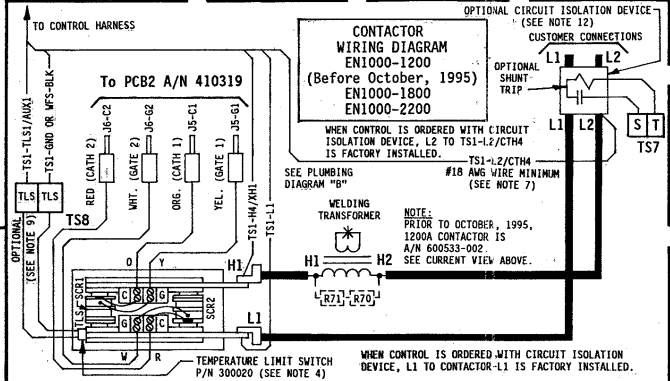
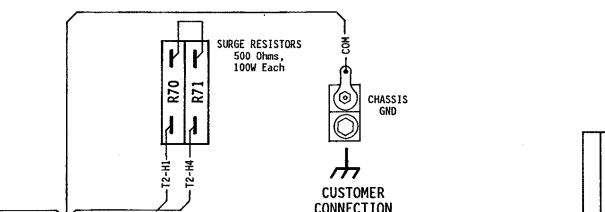
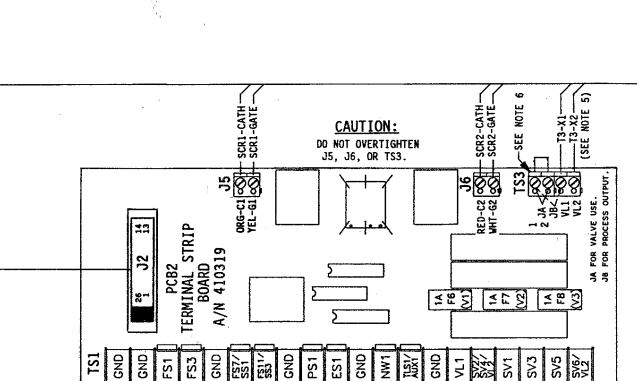
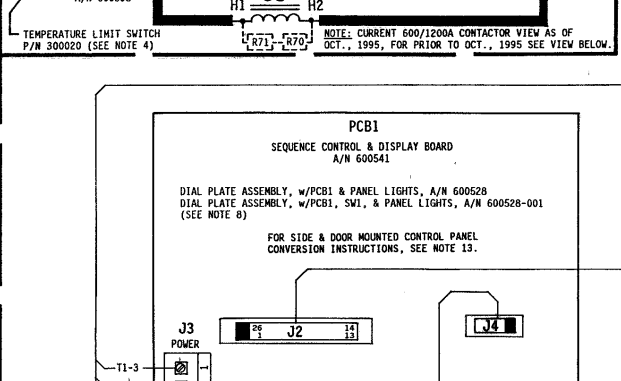
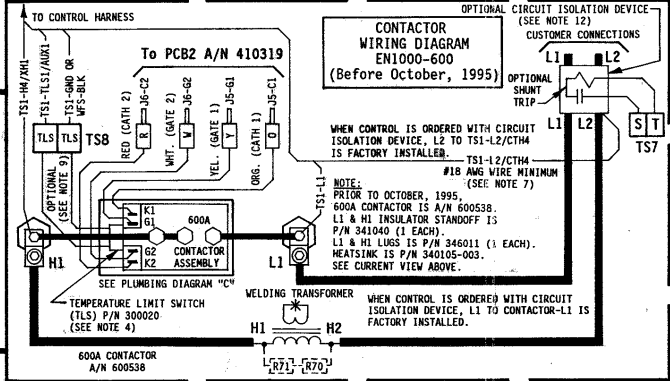


Table with columns: QTY., DESIG., PART NO., DESCRIPTION. Lists parts for the control section, including dial plates, switches, and transformers.

Table with columns: QTY., DESIG., PART NO., DESCRIPTION. Lists parts for the contactor section, including terminal strips, fuses, and transformers.

Table with columns: QTY., DESIG., PART NO., DESCRIPTION. Lists parts for the control section, including terminal strips, fuses, and transformers.

Table with columns: QTY., DESIG., PART NO., DESCRIPTION. Lists parts for the control section, including terminal strips, fuses, and transformers.

Table with columns: REV, AUTH, DESCRIPTION, DRAWN BY, CHK'D BY, DATE. Includes ENTRON CONTROLS INC logo and drawing information.