

CAUTION - READ MANUAL & ALL NOTES BEFORE INSTALLING OR OPERATING CONTROL. SEE NOTE 1.

WARNING: HIGH VOLTAGE

VOLTAGES PRESENT IN THIS CONTROL CAN CAUSE SEVERE OR FATAL INJURIES. NOTE: EVEN THOUGH SUPPLY POWER TO THIS UNIT HAS BEEN DISCONNECTED, THERE MAY BE VOLTAGES IN THIS CONTROL ORIGINATING FROM OTHER SOURCES.

CAUTION Control Shipped Wired for 460 VAC Unless otherwise specified - See Note 2.

CAUTION DO NOT OPERATE WITHOUT WATER ON POWER ON WITHOUT WATER FLOW MAY CAUSE DAMAGE TO CONTROL. TURN POWER OFF WHEN CONTROL IS NOT IN USE.

Table with columns: QTY., DESIG., PART NO., DESCRIPTION. Lists parts for control section including dial plates, switches, and lamps.

Table with columns: QTY., DESIG., PART NO., DESCRIPTION. Lists parts for contactor section including terminal strips, resistors, transformers, and fuses.












Optional Keylock when specified by customer. See Note 8. Pack Key in Poly bag 900148 & attach to Door w/Yellow Tape 900118.

MANUFACTURING INSTRUCTIONS: See Drawing #440445 for Packing Instructions "E" Cabinet. See Drawing #440448 for Label Locations "E" Cabinet.


Table with columns: REV, AUTH, DESCRIPTION, DATE, DRAWN BY, CHK'D BY, APPROVED BY. Includes drawing title and revision history.

CURRENT SENSING COIL/SENSOR APPLICATION CHART. Table mapping coil/sensor model numbers to contactor sizes (300A, 600A, 1200A, 1800A, 2200A).

X = ONE CURRENT TRANSFORMER ASSEMBLY OR ONE SECONDARY CURRENT SENSOR ASSEMBLY.

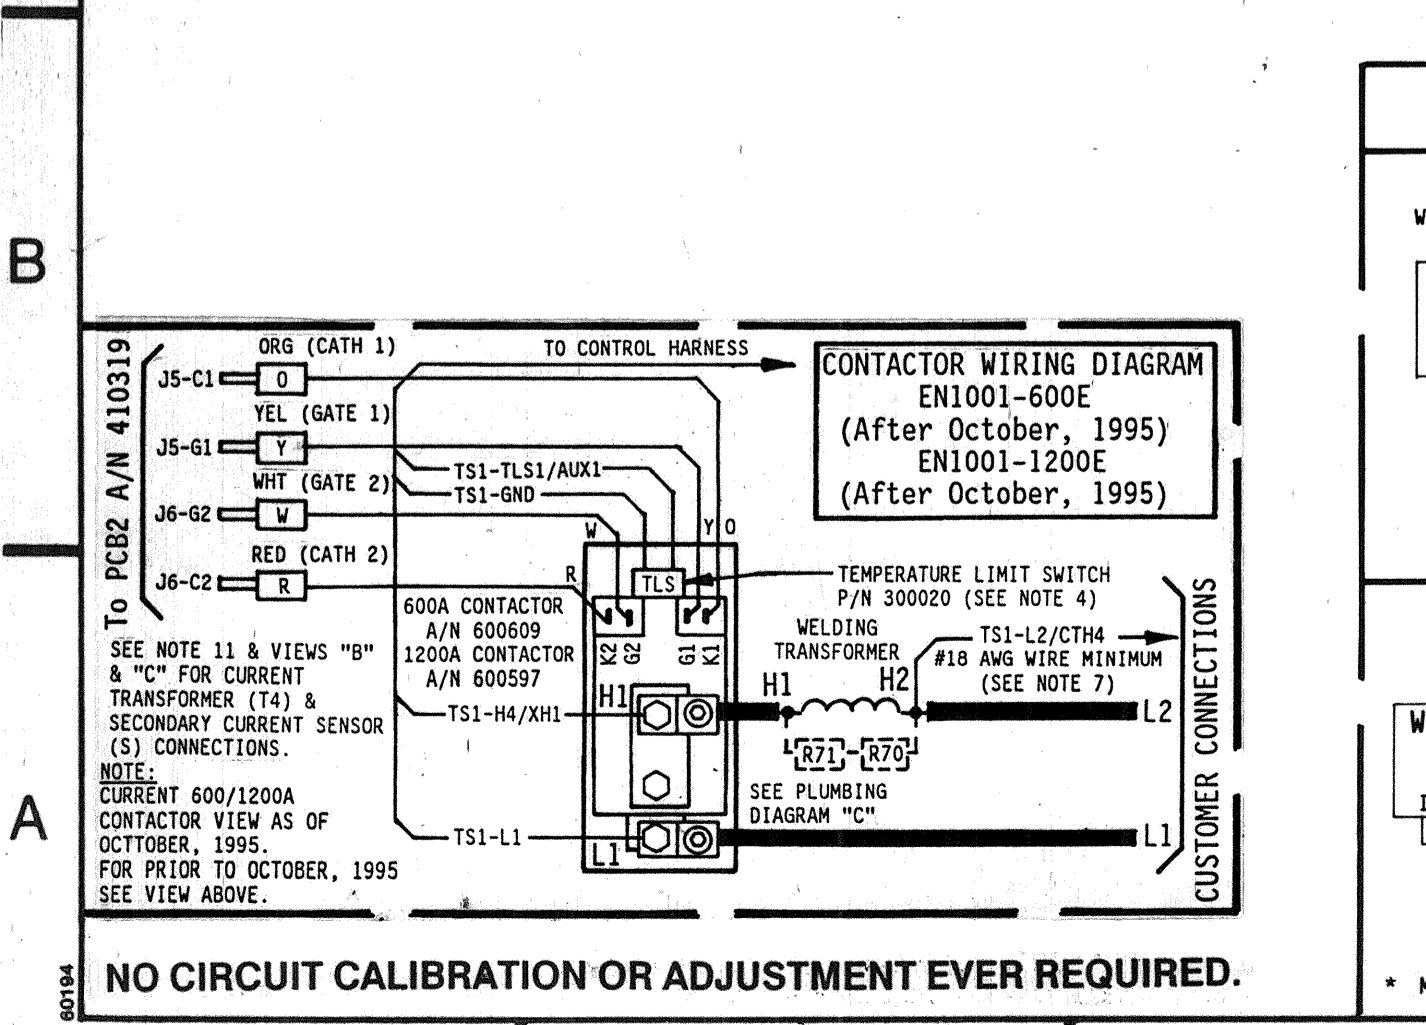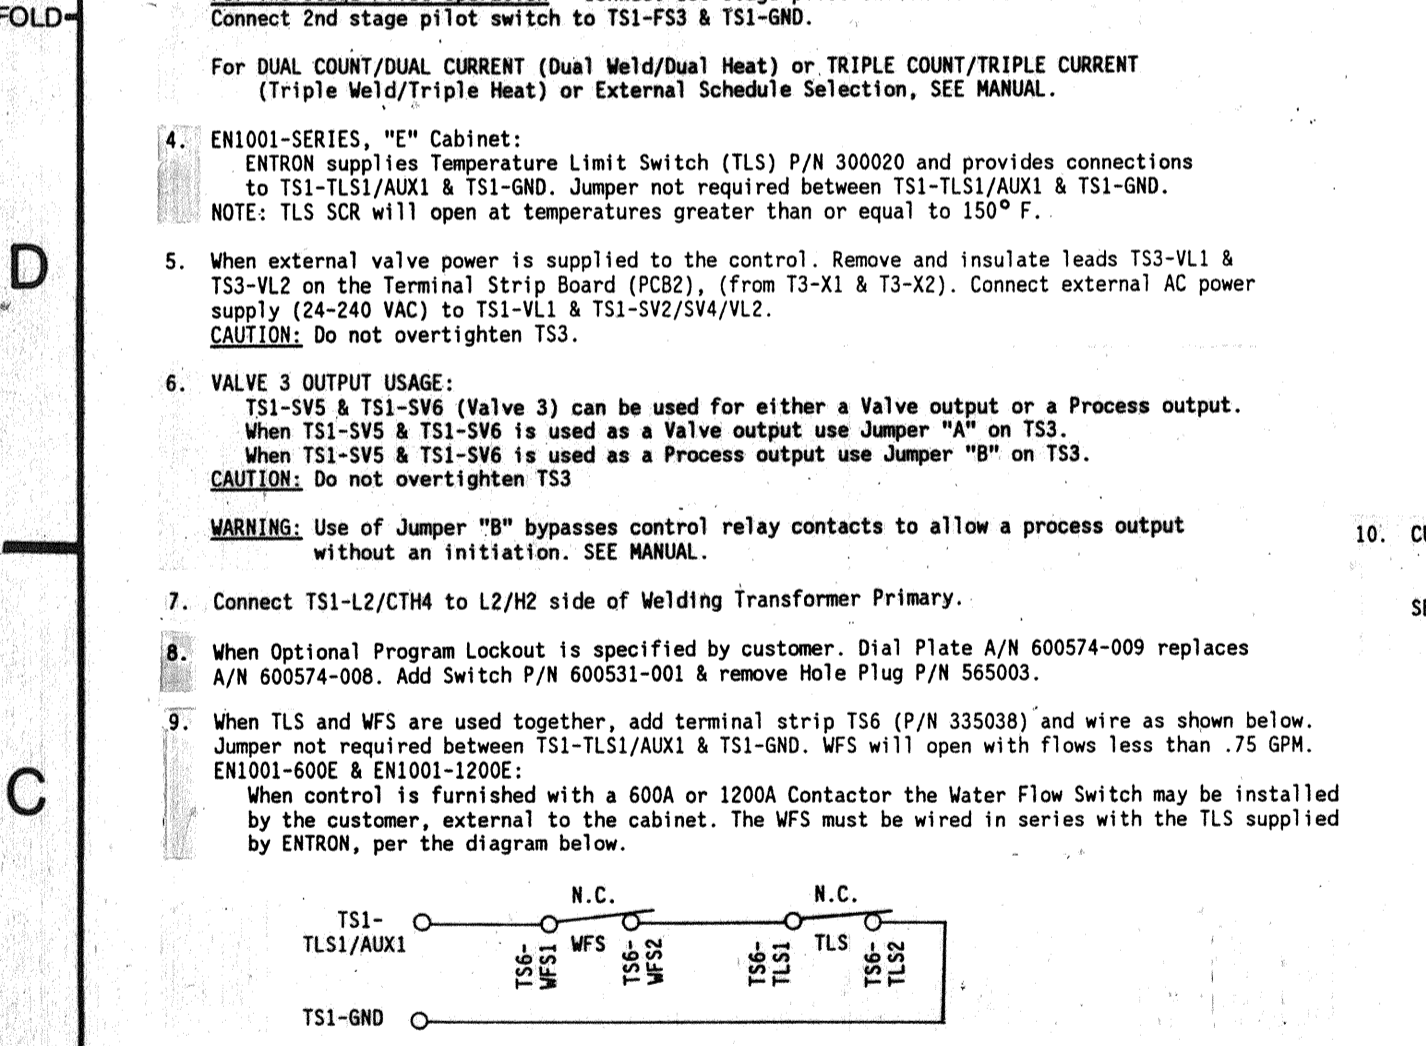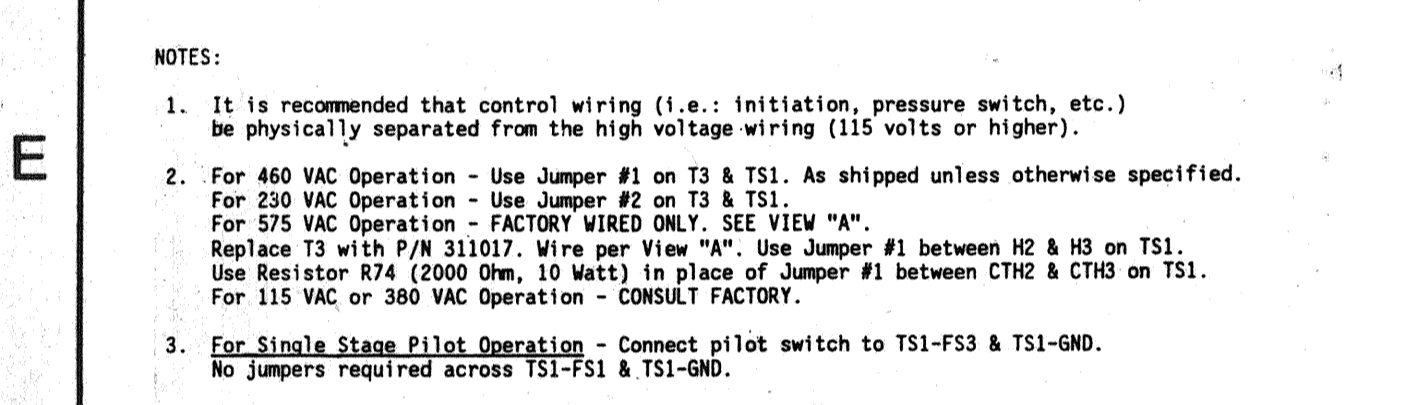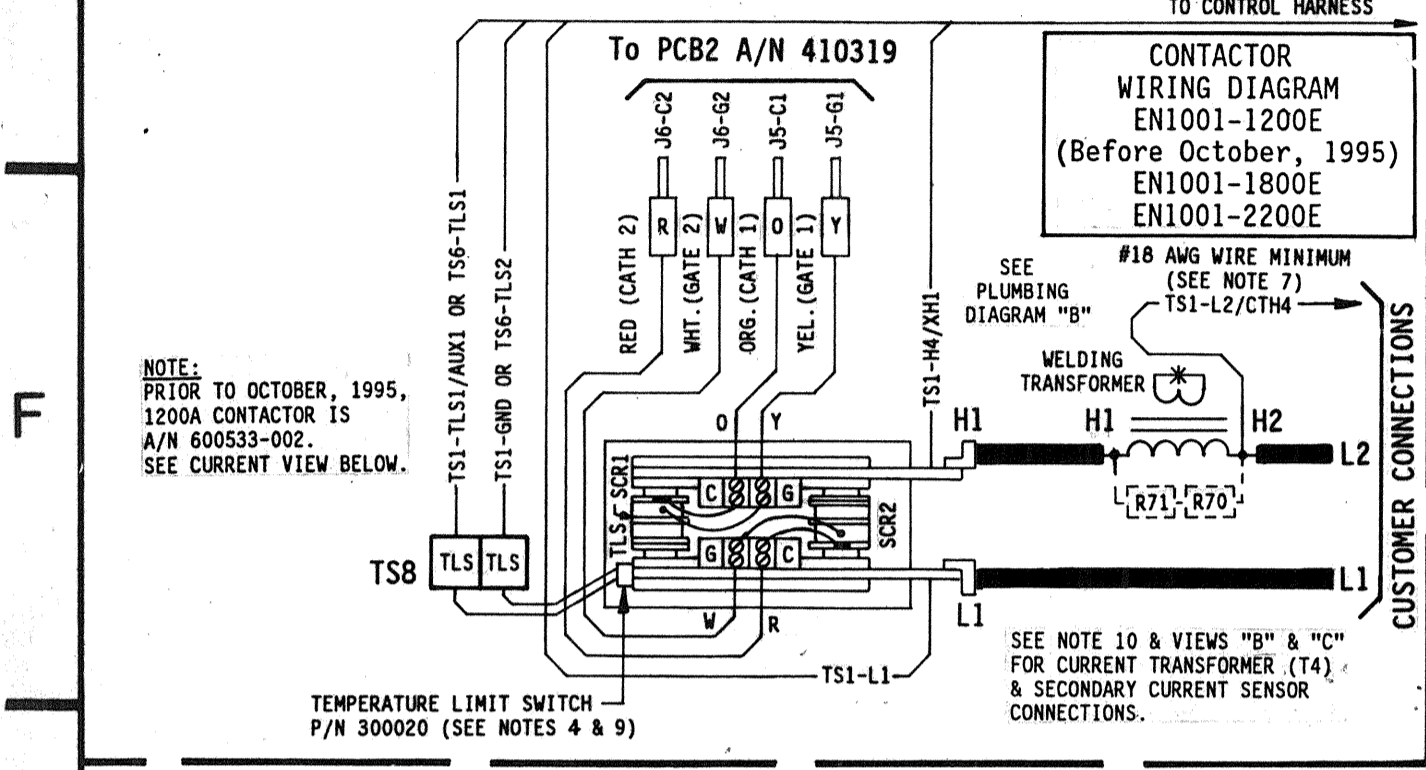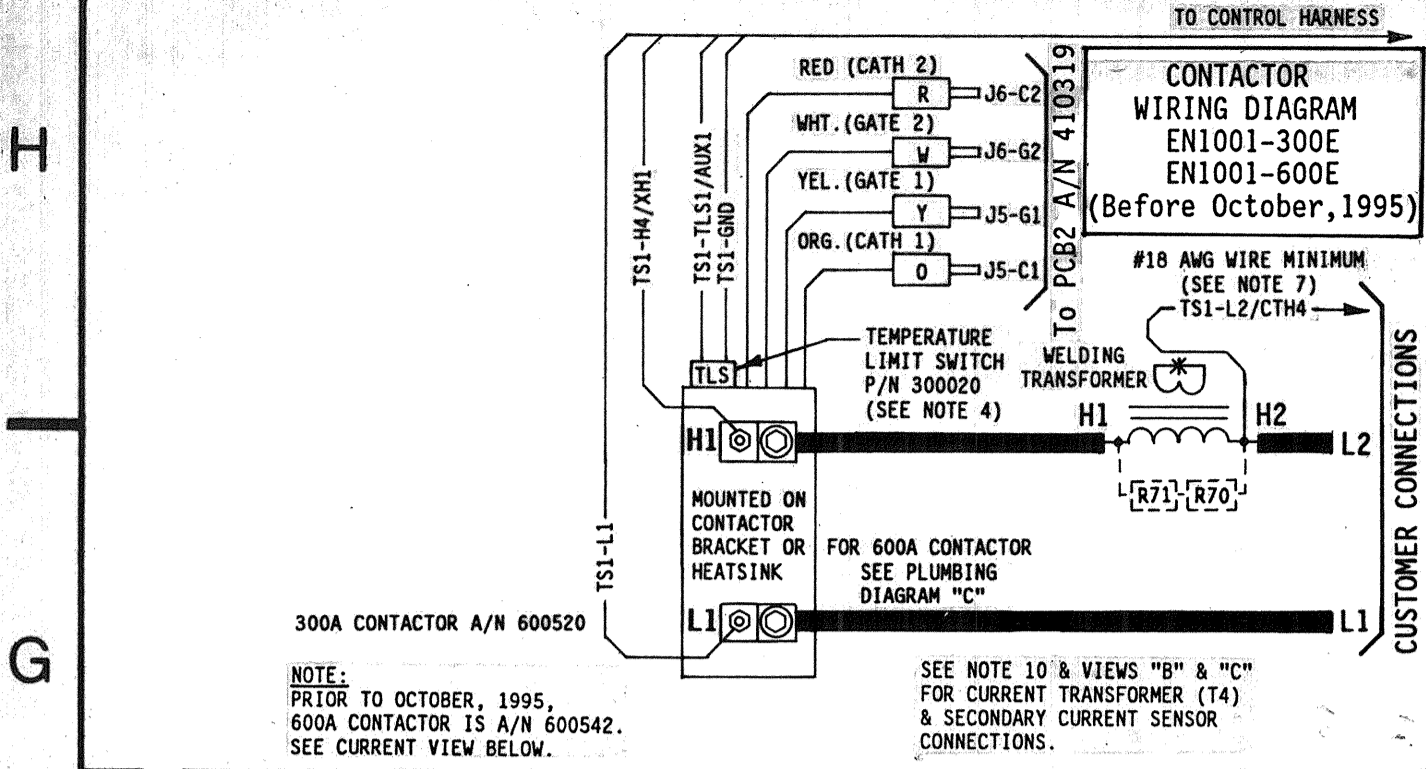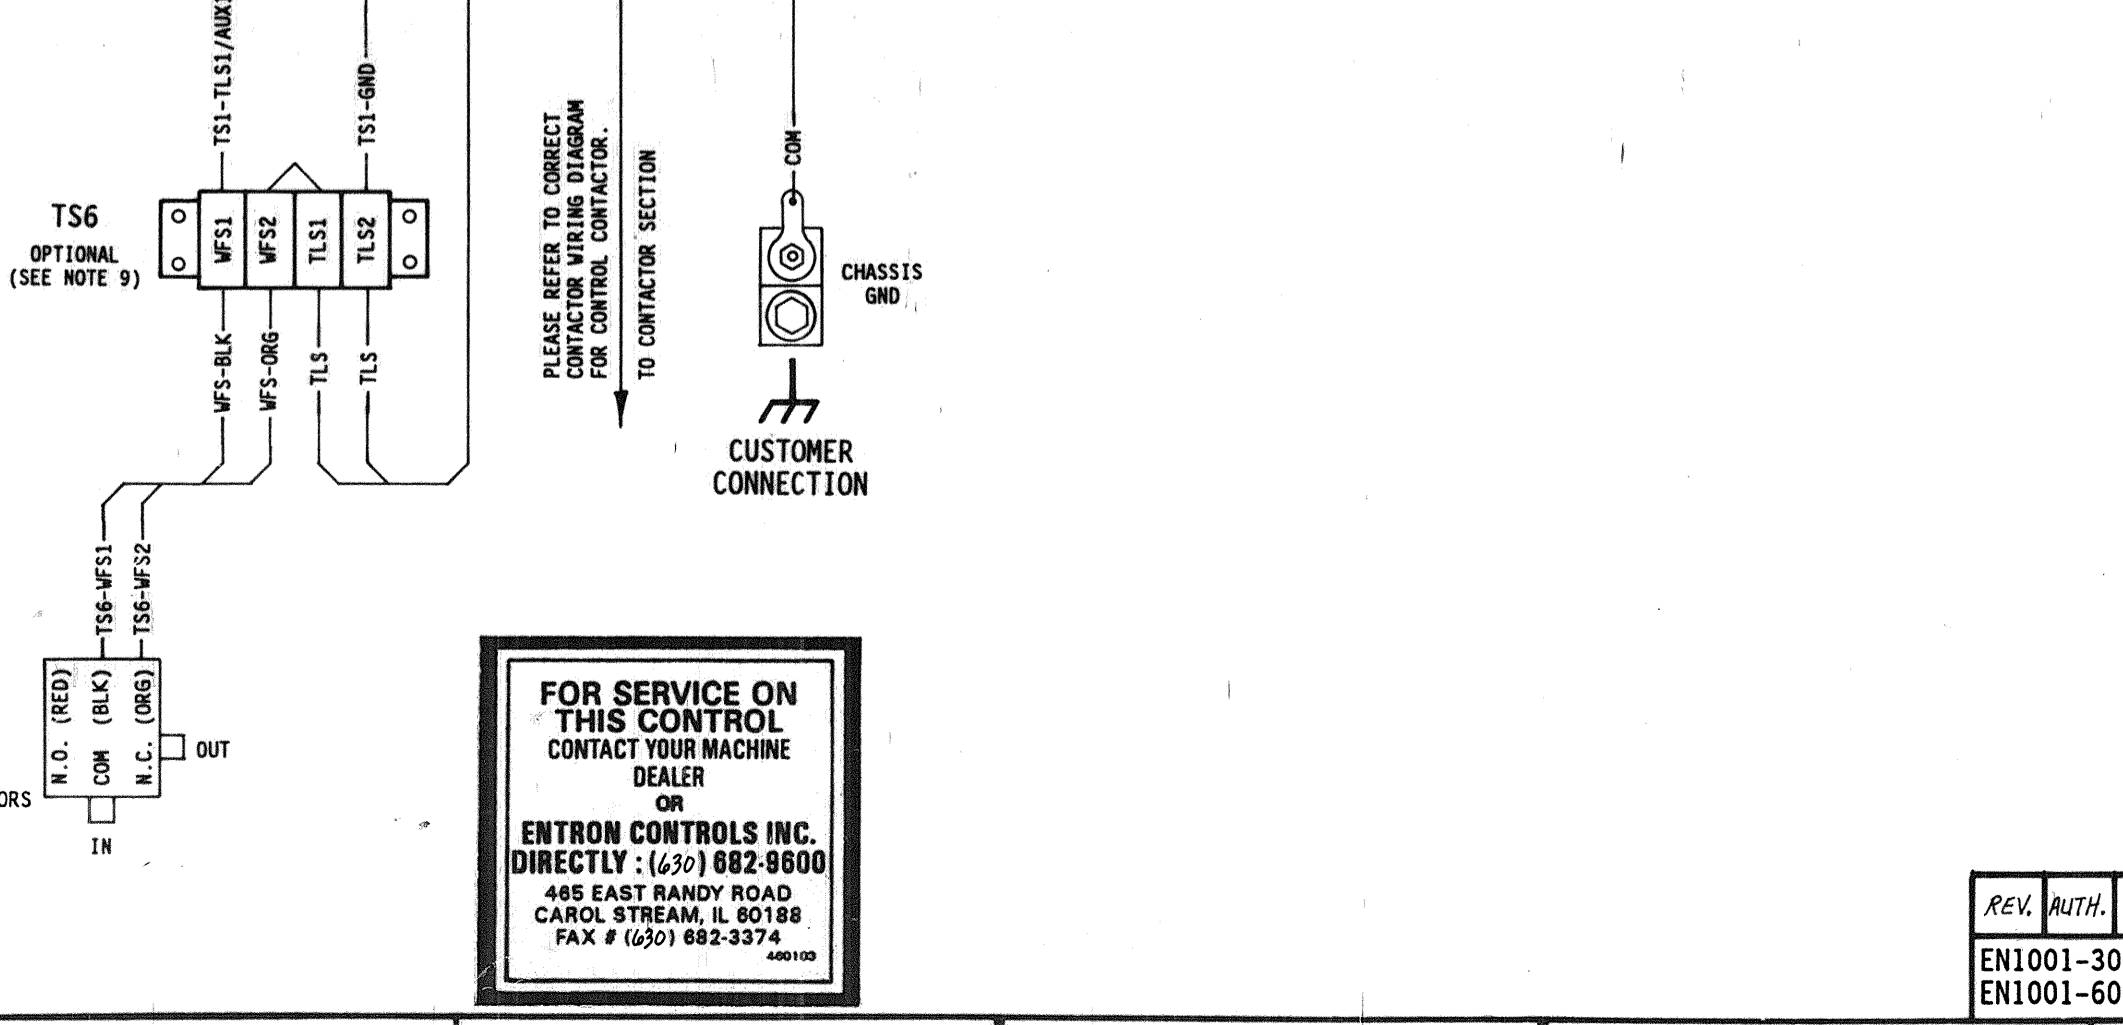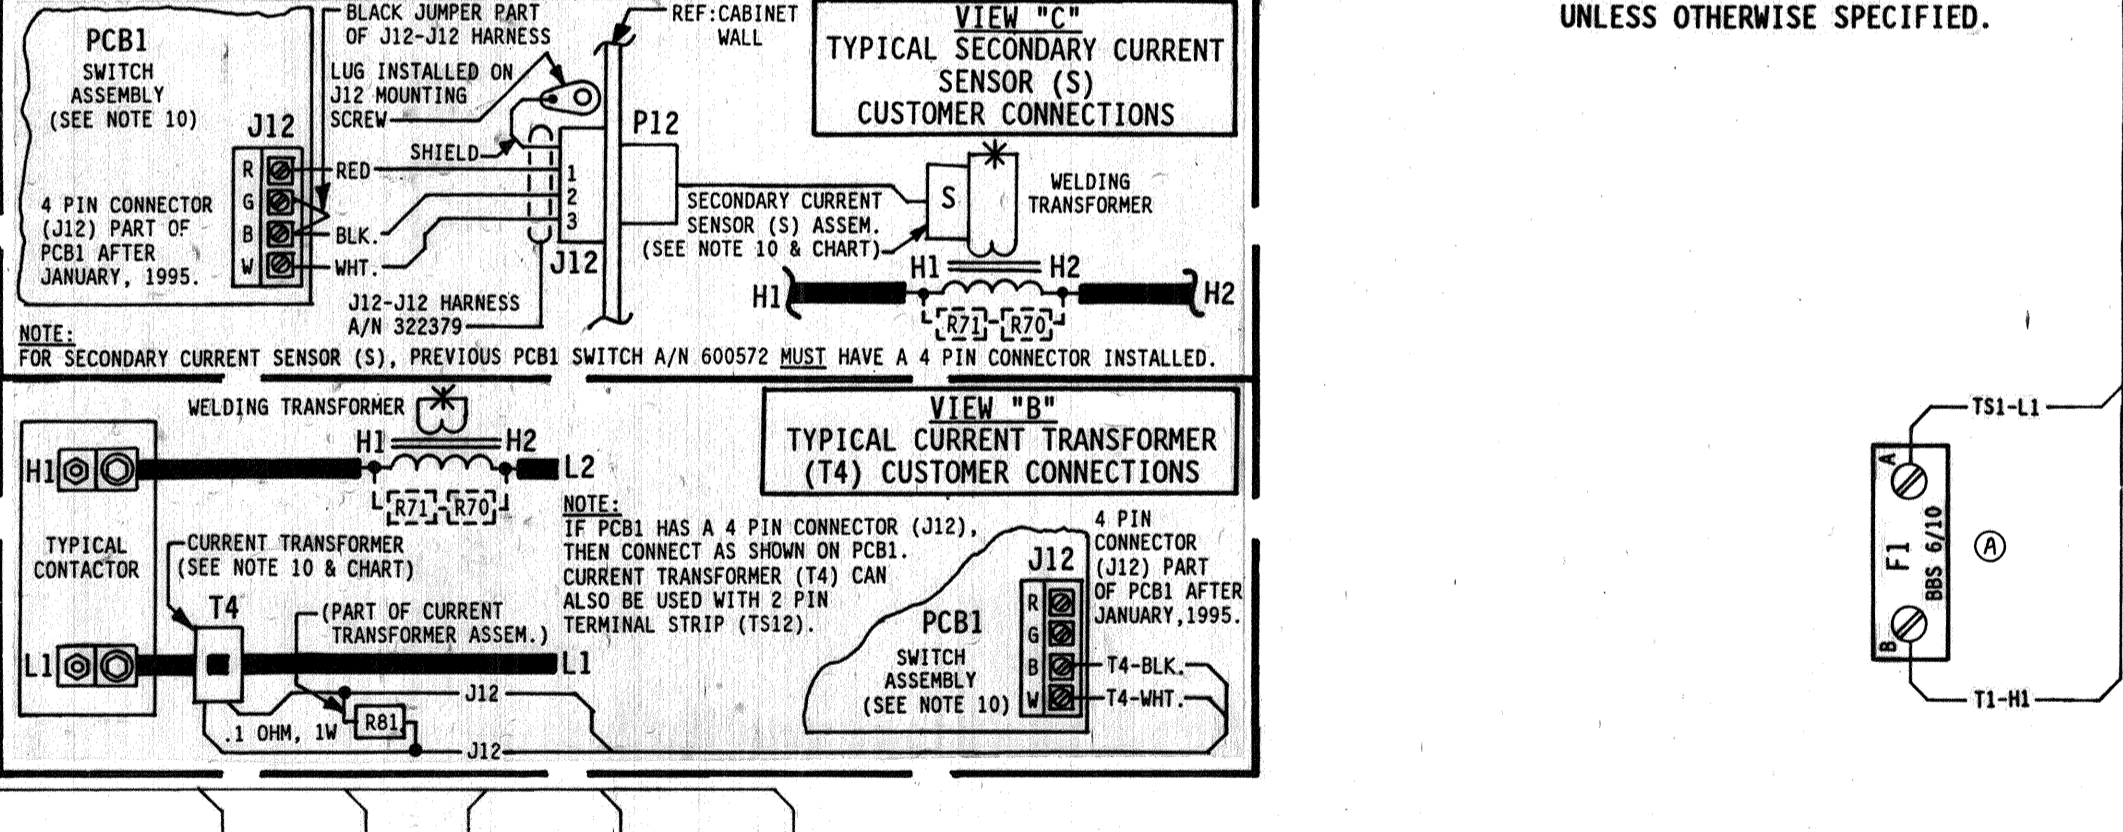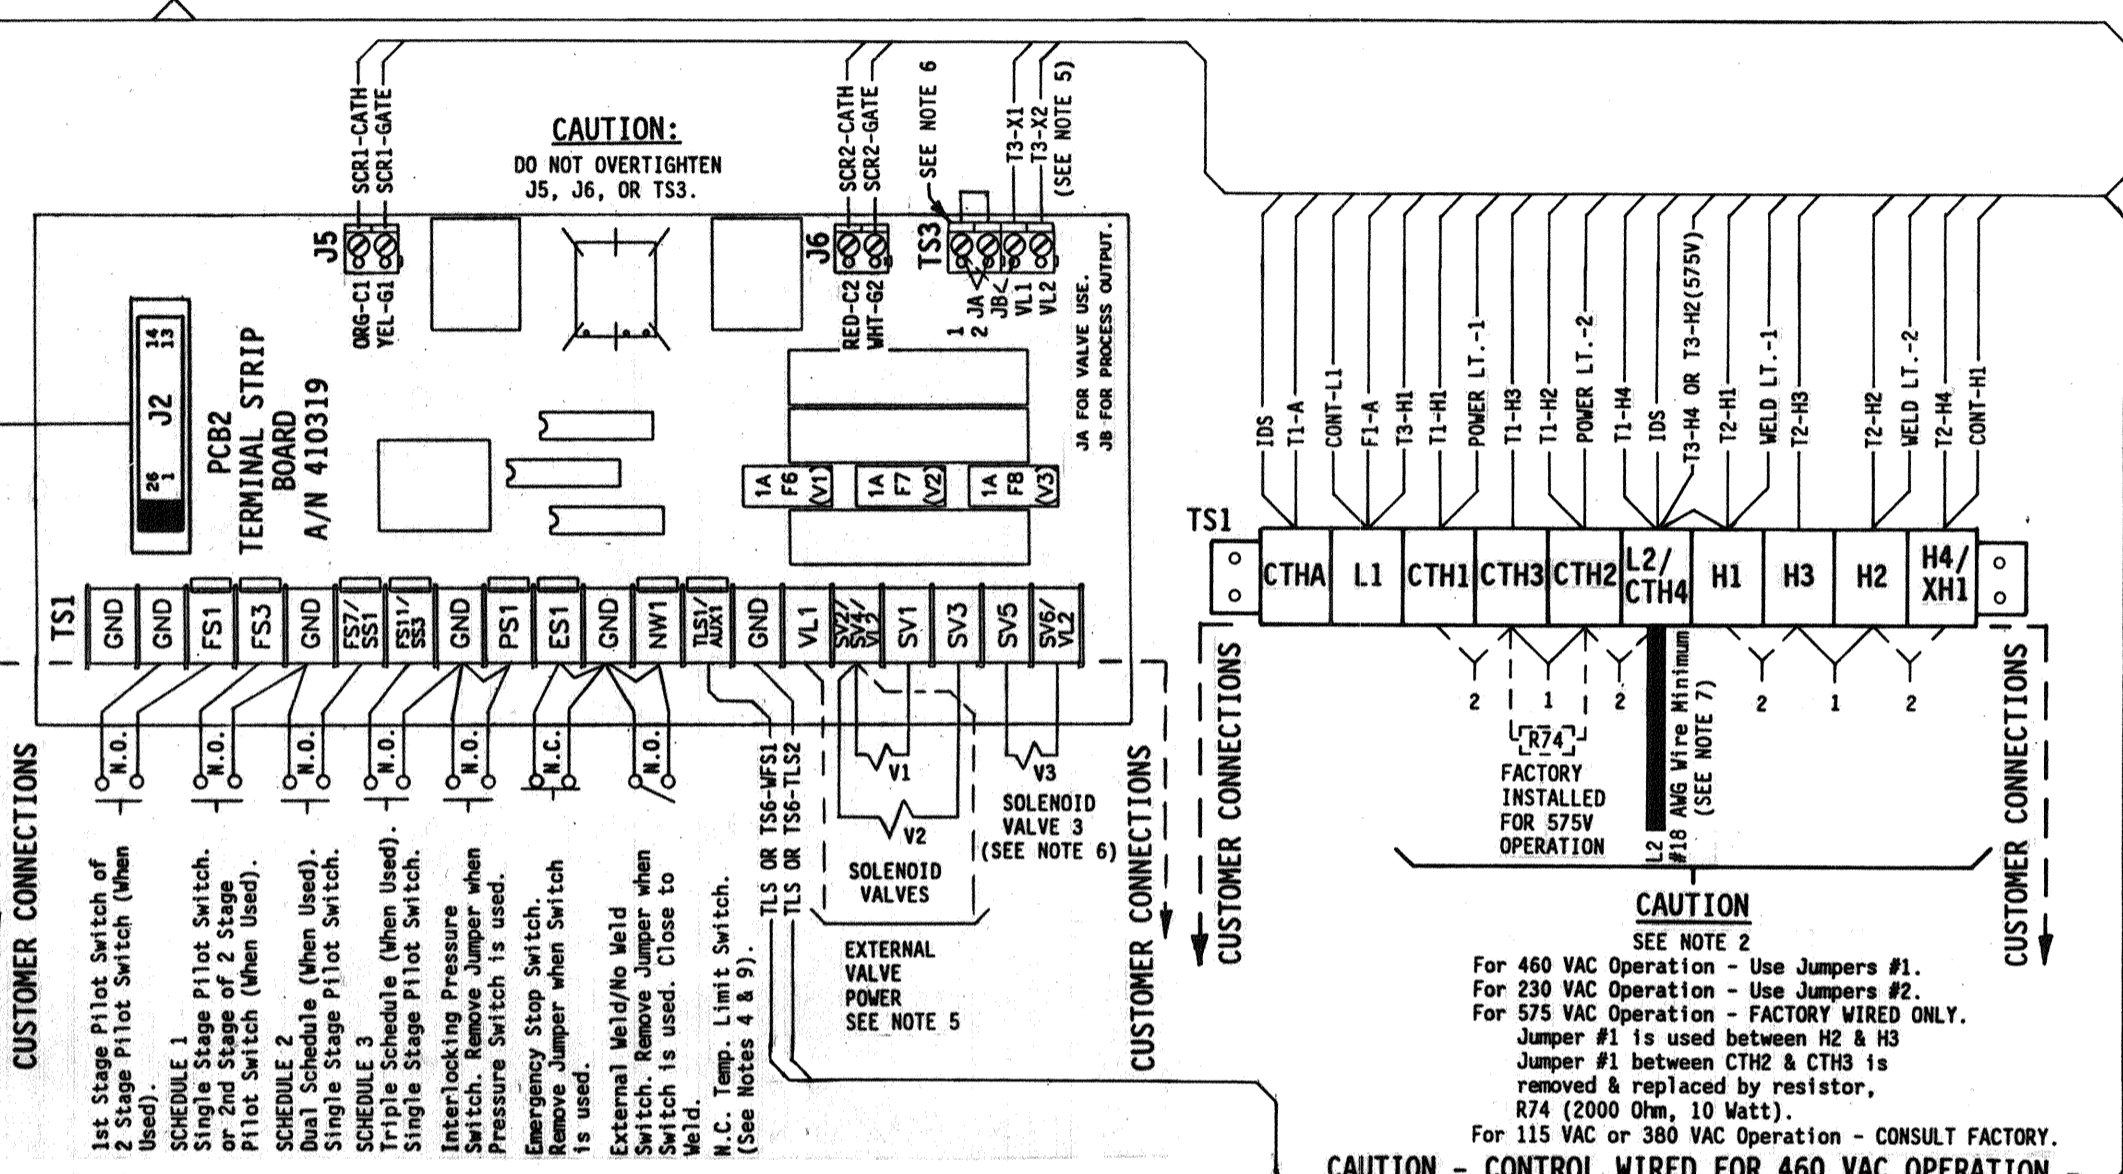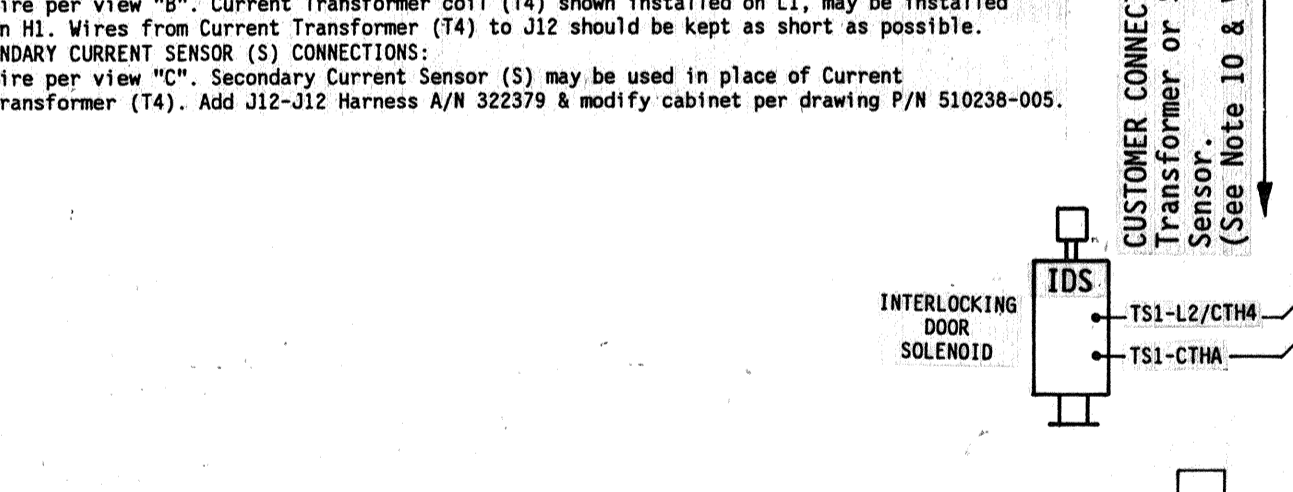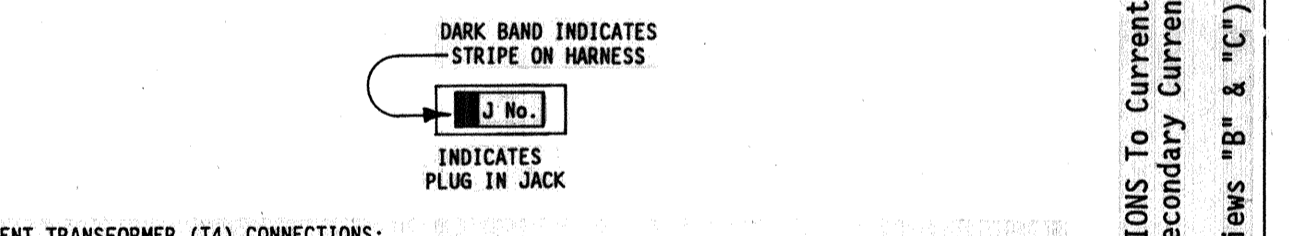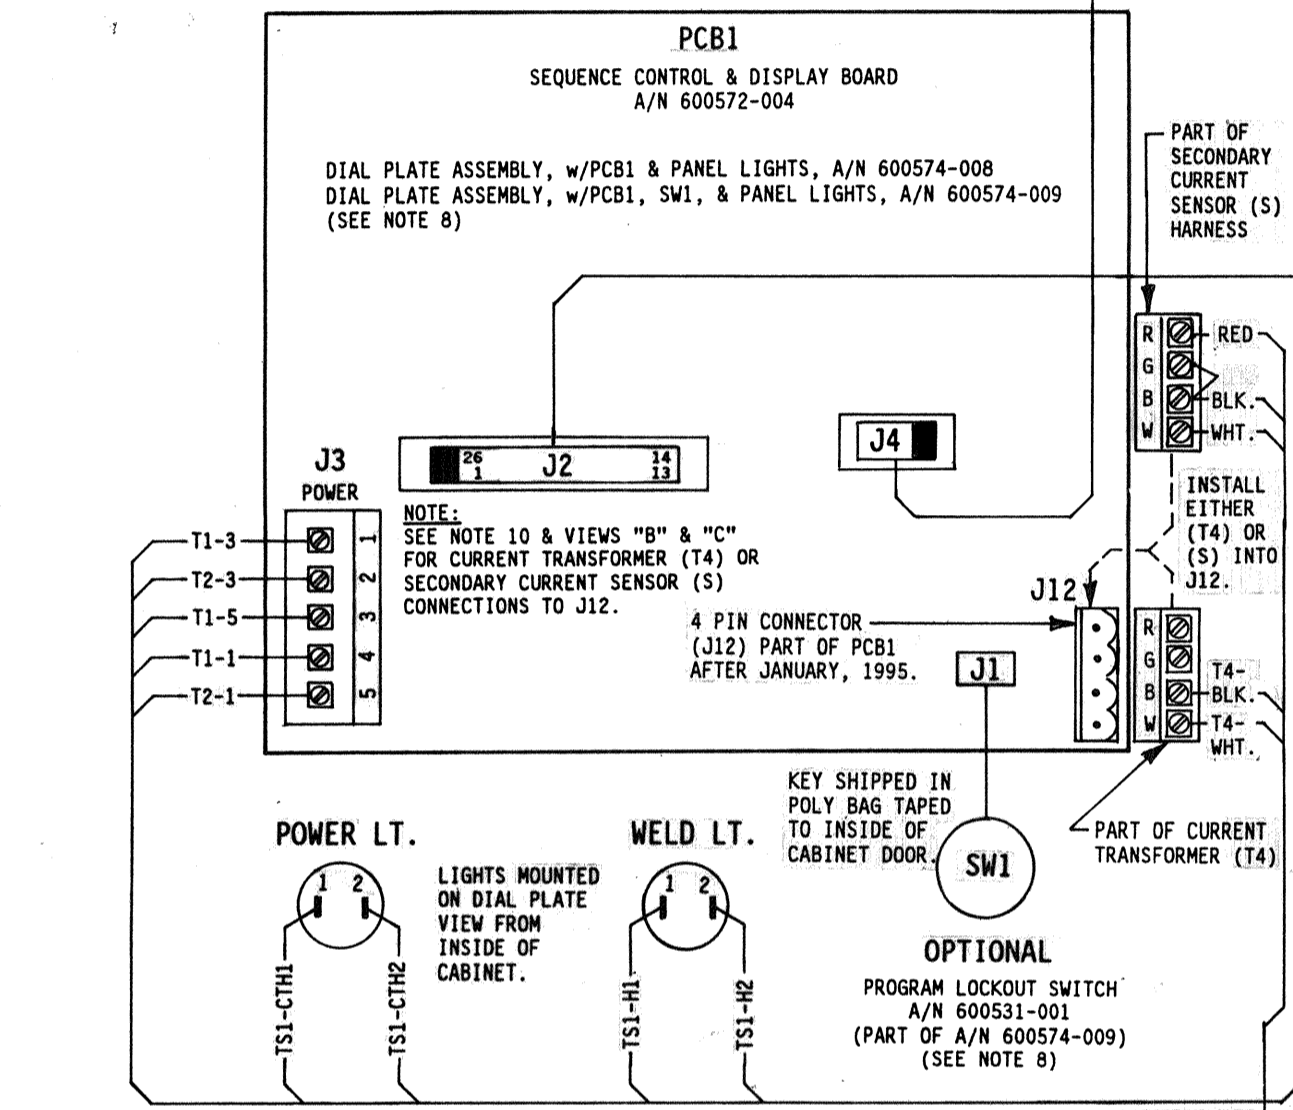

NO CIRCUIT CALIBRATION OR ADJUSTMENT EVER REQUIRED.

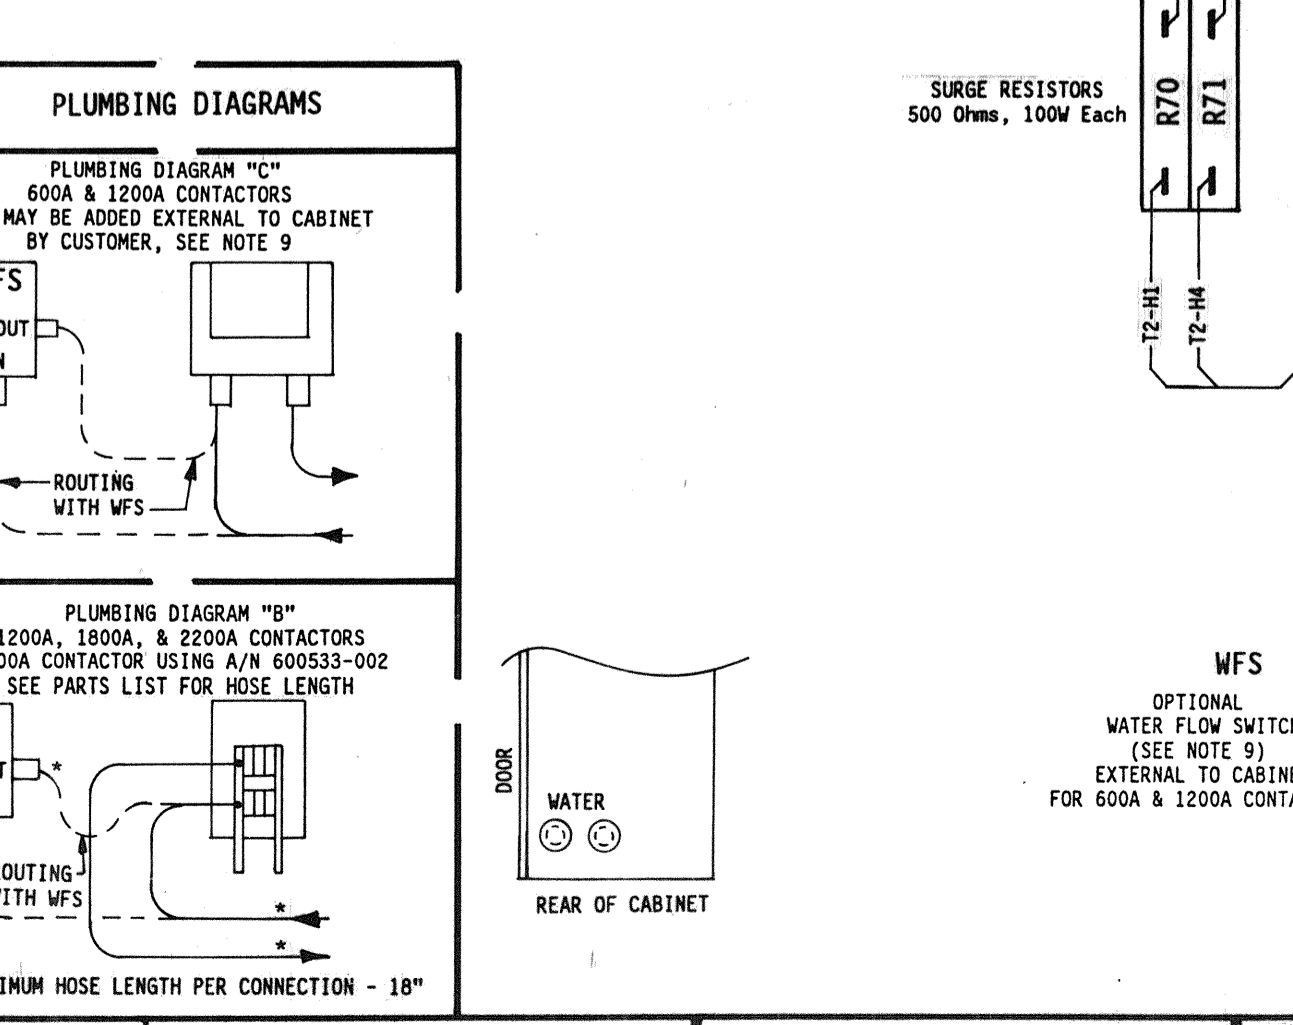

FOR SERVICE ON THIS CONTROL CONTACT YOUR MACHINE DEALER OR ENTRON CONTROLS INC. DIRECTLY: (630) 682-9600