


CAUTION - READ MANUAL & ALL NOTES BEFORE INSTALLING OR OPERATING CONTROL. SEE NOTE 1. NO CIRCUIT CALIBRATION OR ADJUSTMENT EVER REQUIRED.

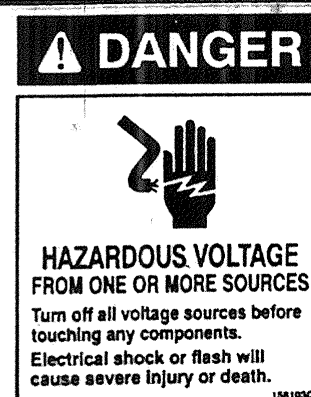

NOTICE FOR SERVICE ON THIS CONTROL Contact Your Machine Dealer Or ENTRON CONTROLS INC. DIRECTLY (630) 682-9600 465 EAST RANDY ROAD CAROL STREAM, IL 60188 FAX # (630) 682-3374

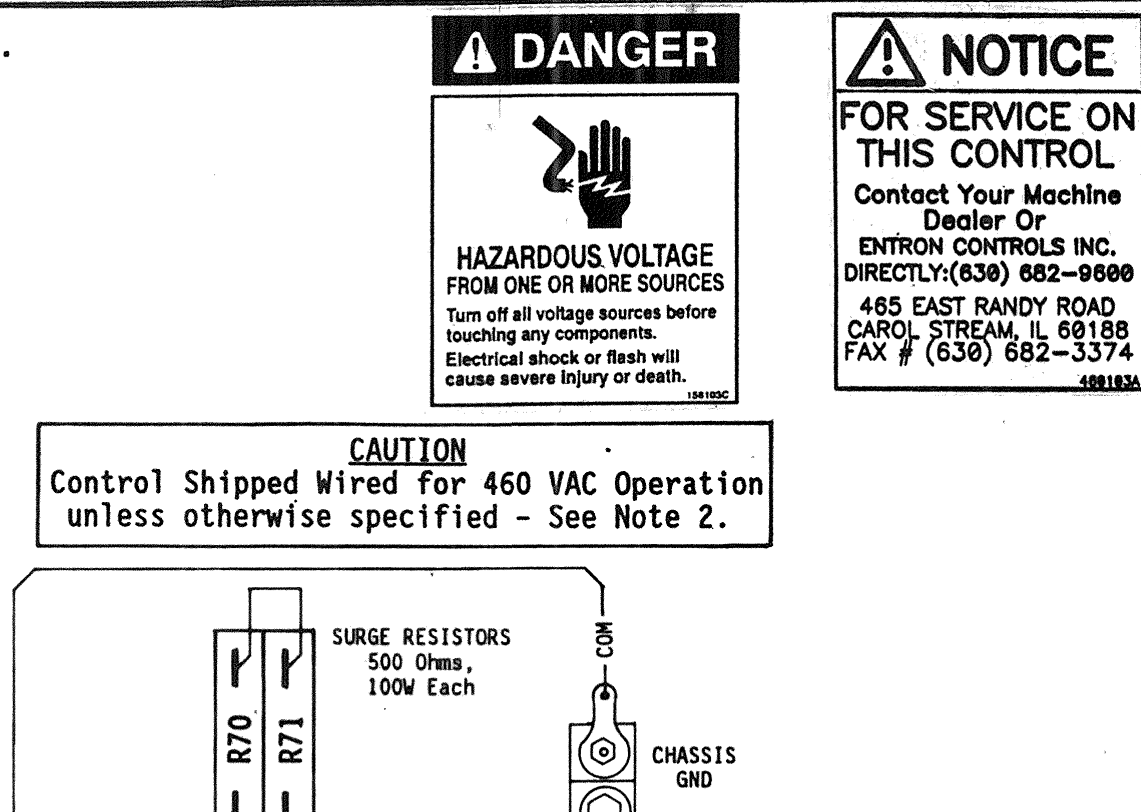
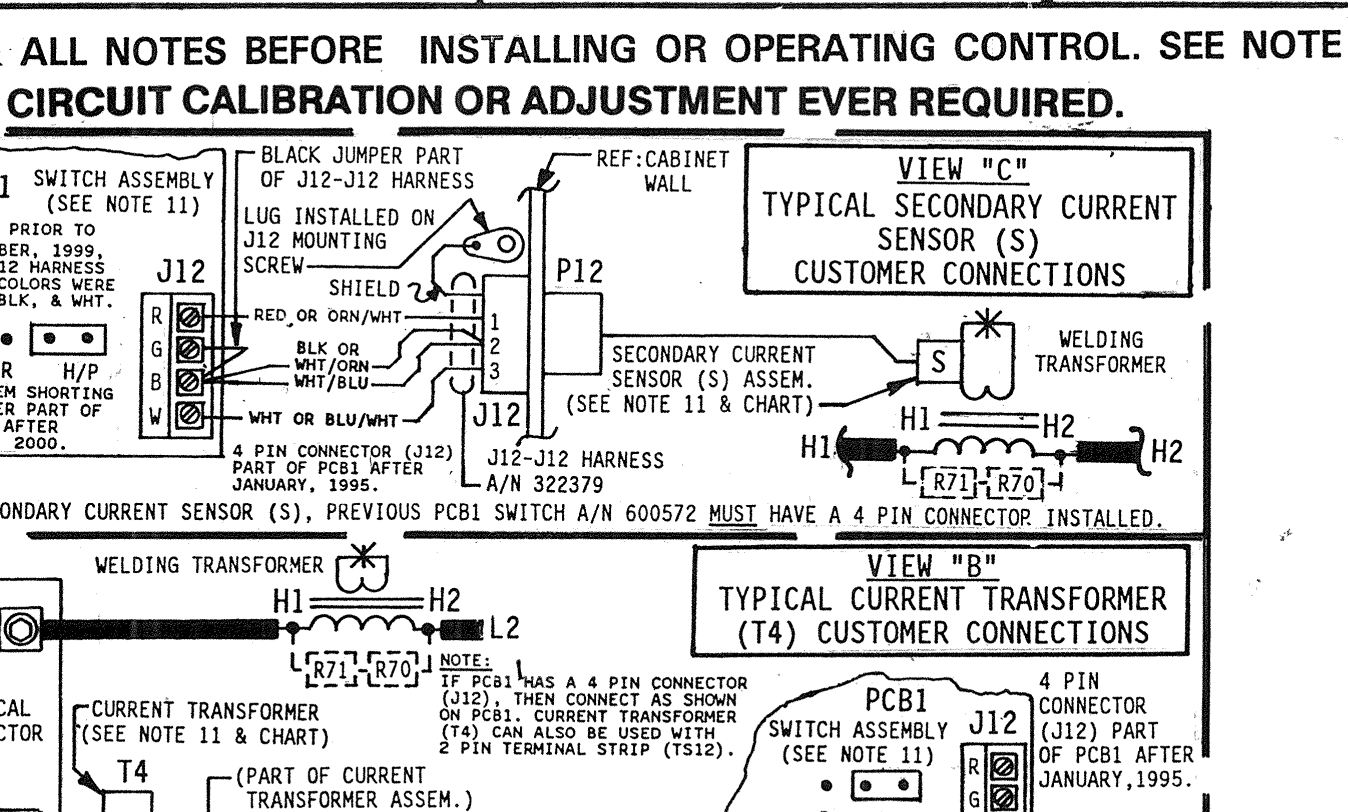
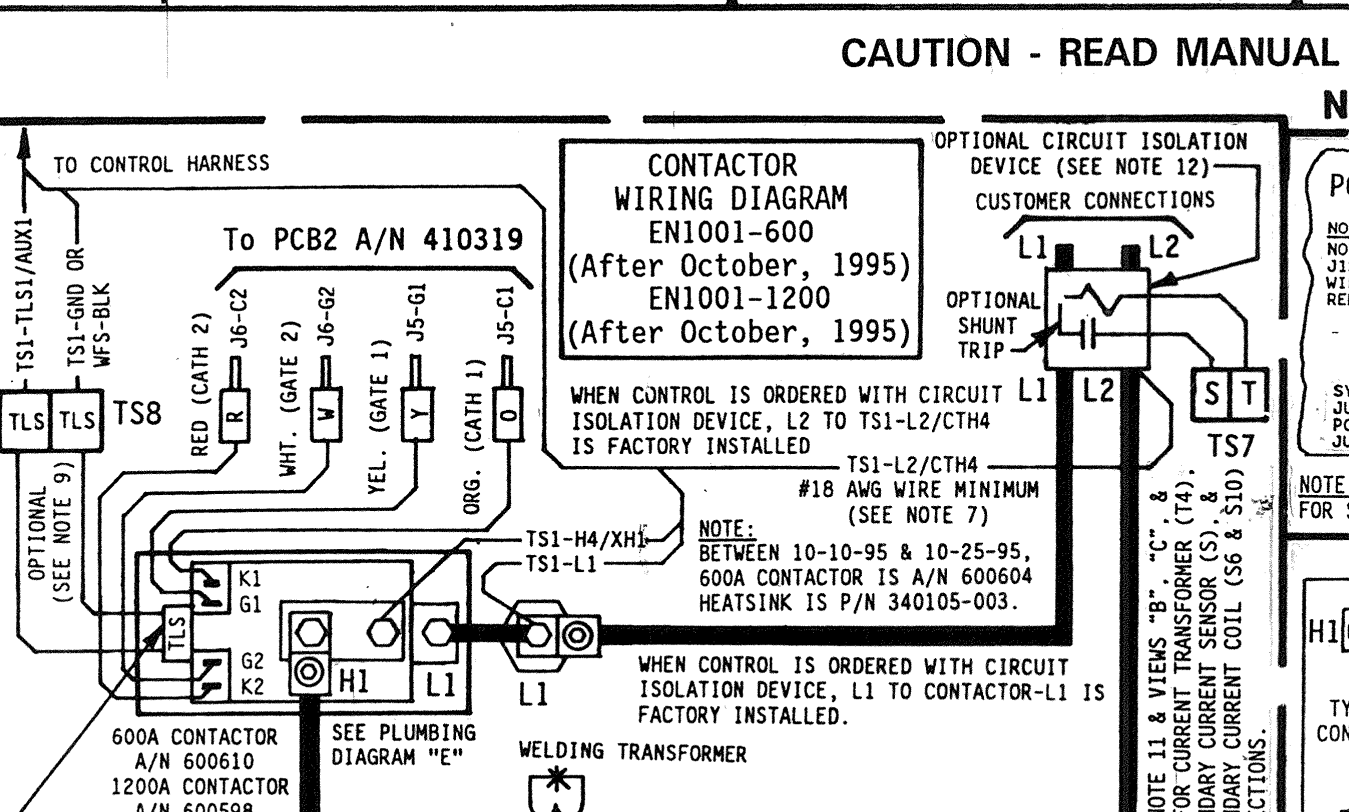
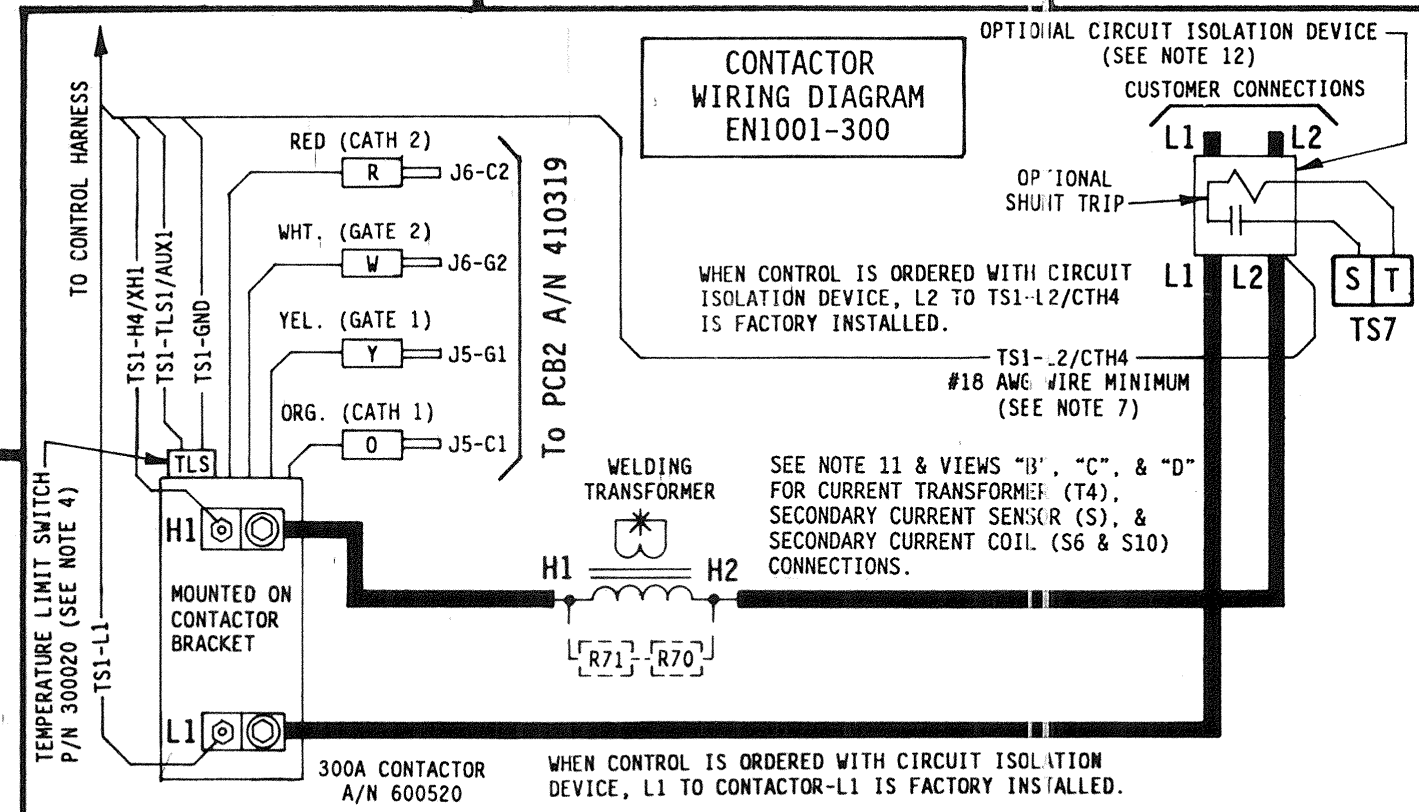


Table with columns: QTY., DESIG., PART NO., DESCRIPTION. Lists various components like PCB1, SW1, J232, J232, PCB5, J4-J4, PWR.LT., WLD.LT., J2-J2, J3.

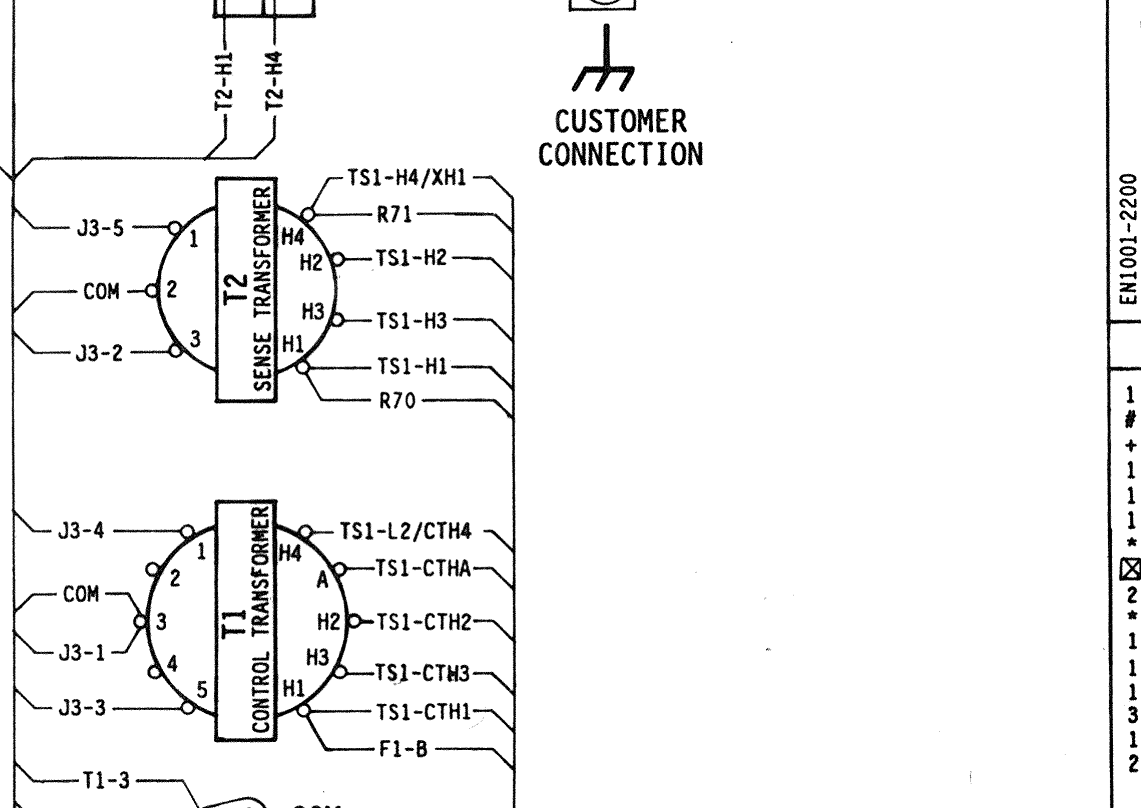
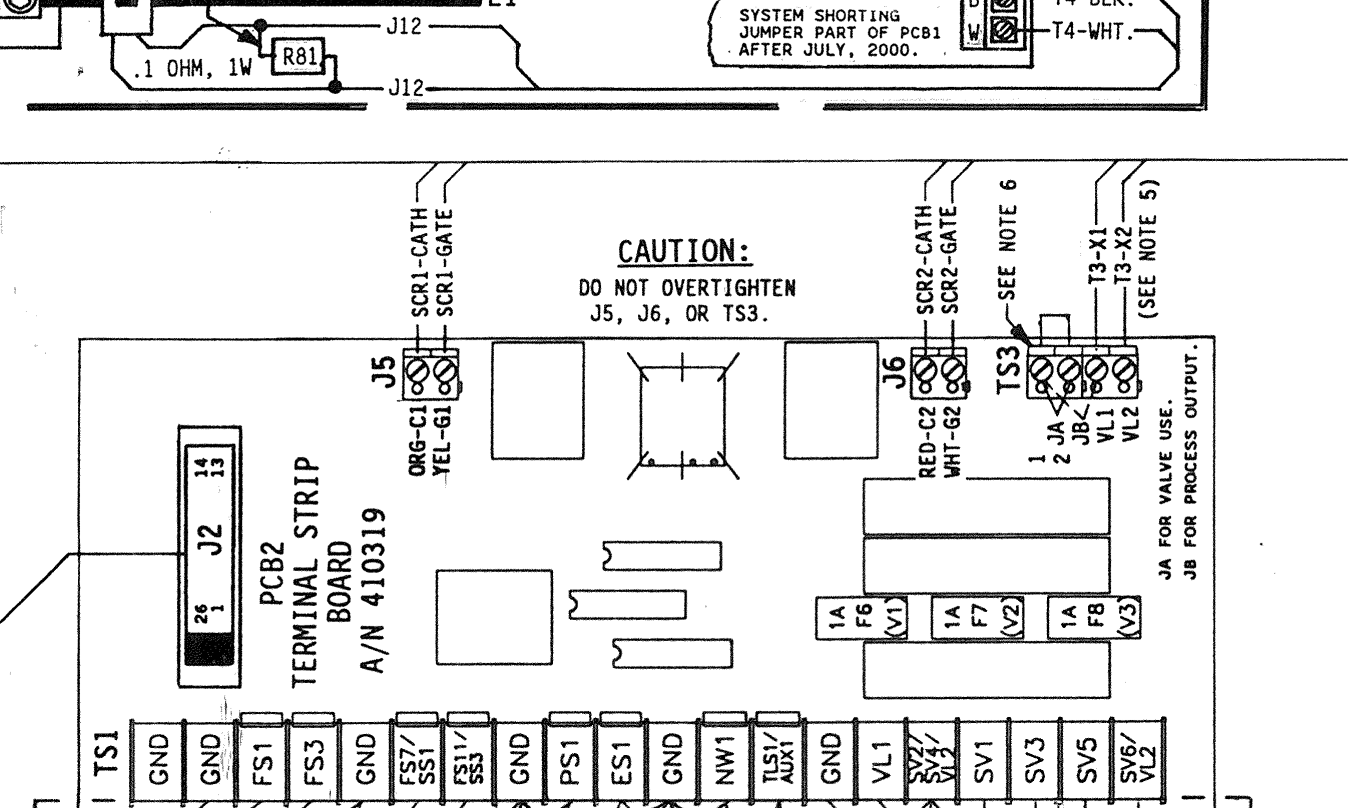
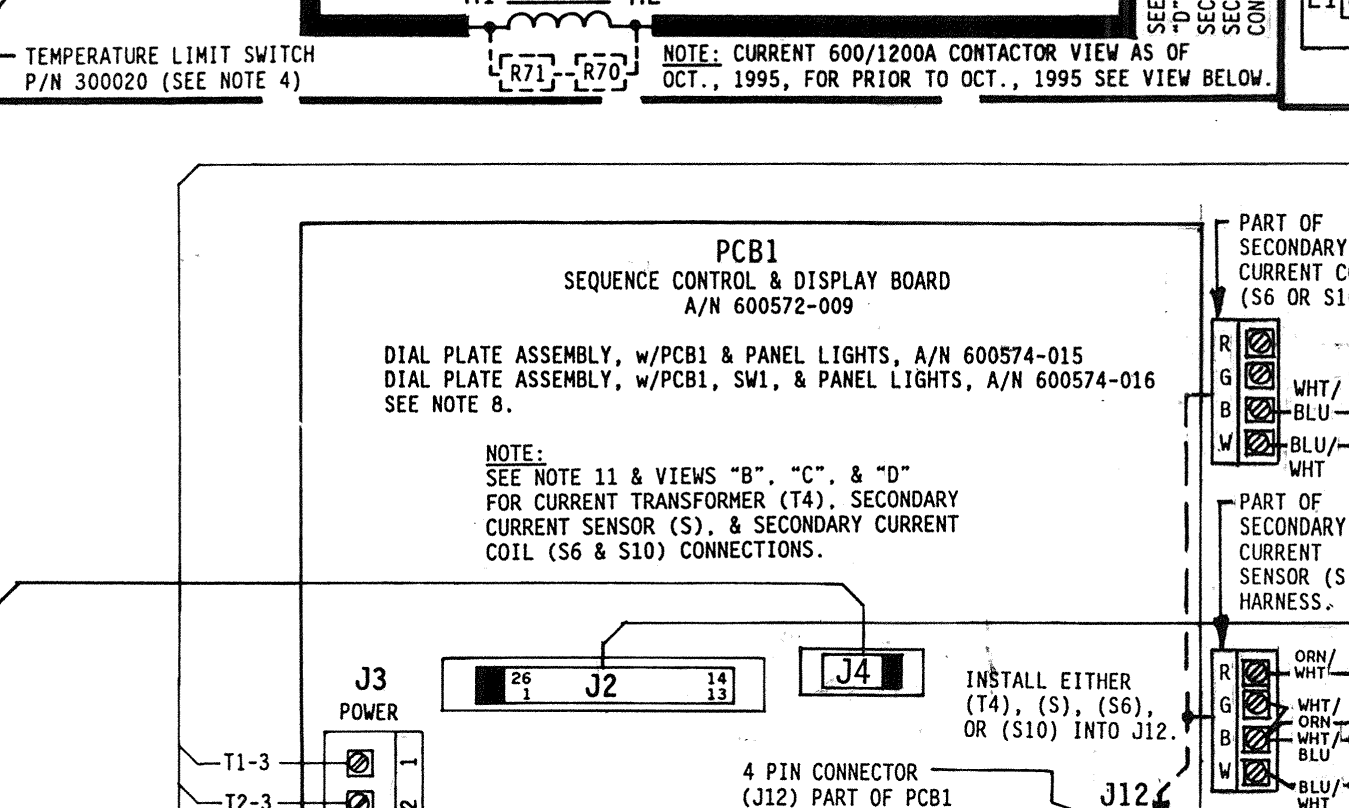
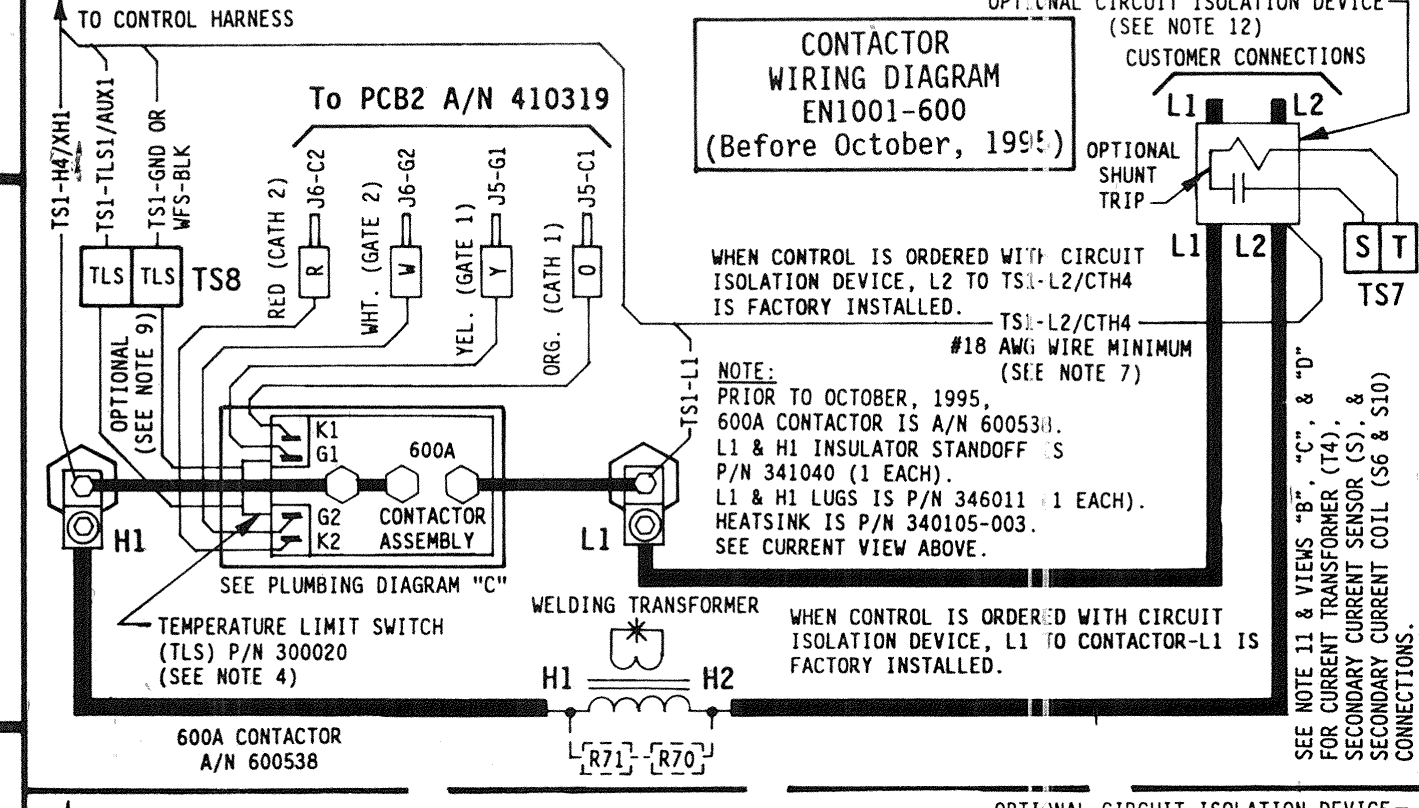


Table with columns: QTY., DESIG., PART NO., DESCRIPTION. Lists various components like PCB1, SW1, J232, J232, PCB5, J4-J4, PWR.LT., WLD.LT., J2-J2, J3.

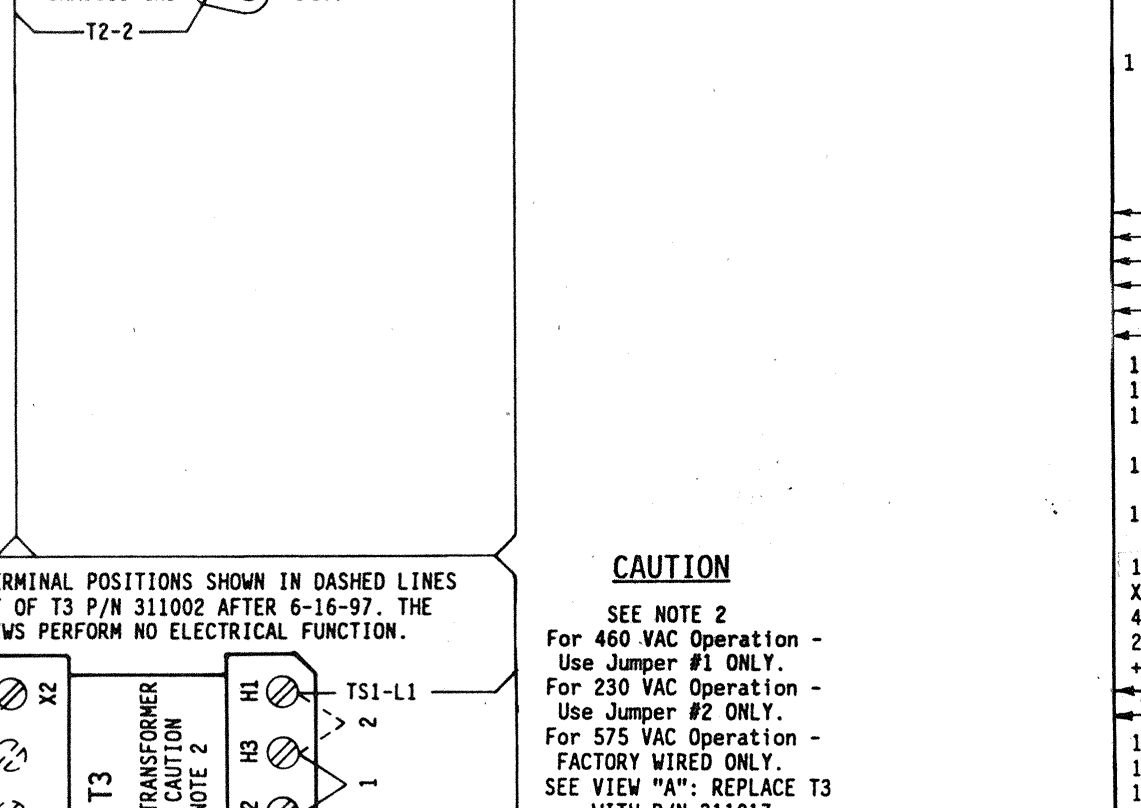
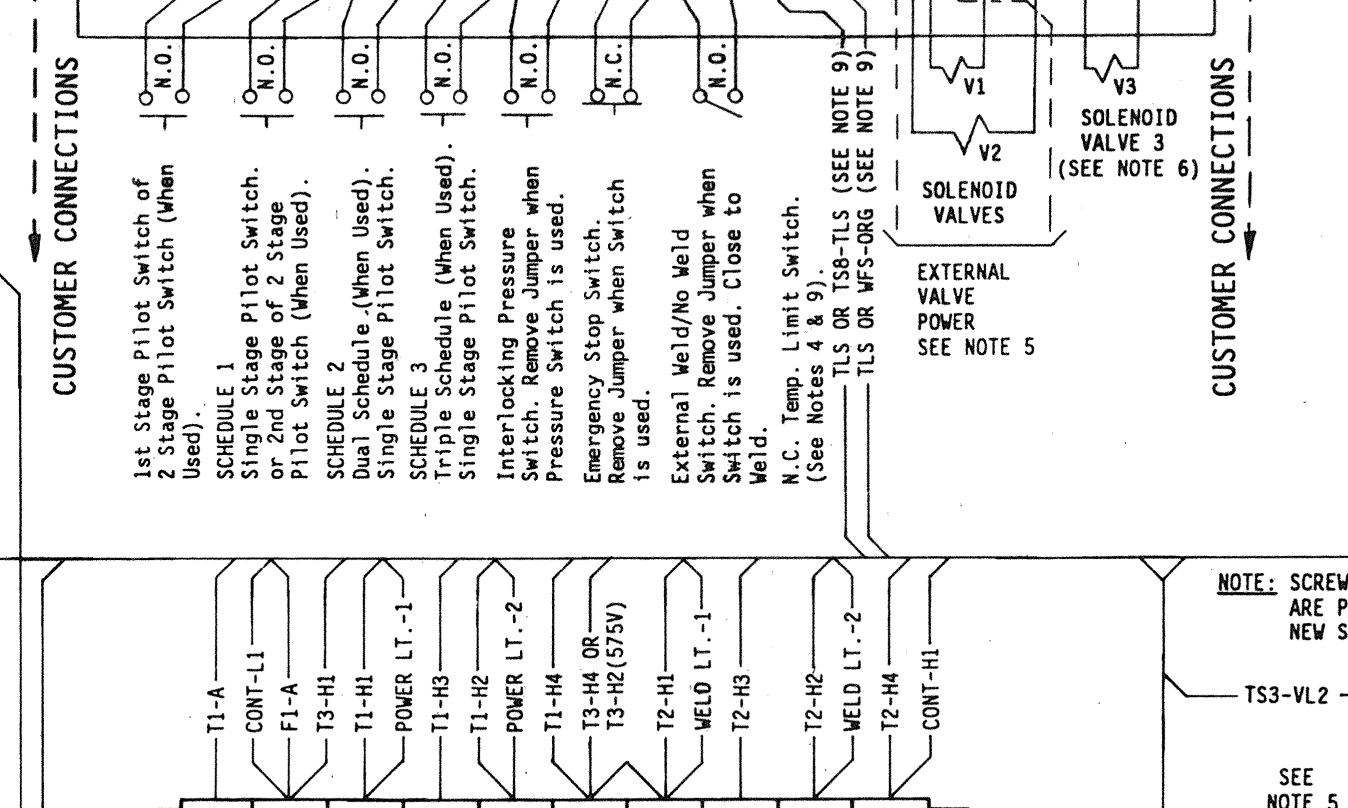
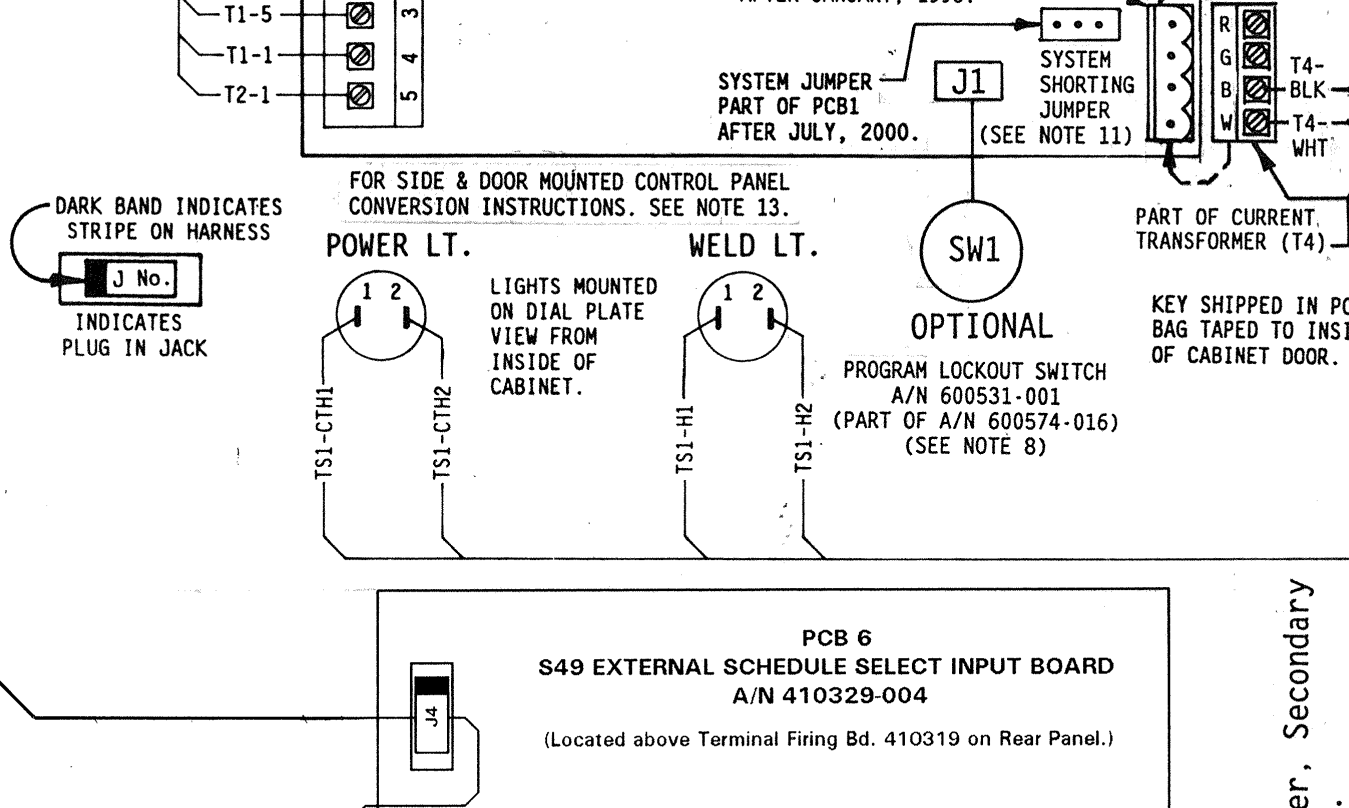
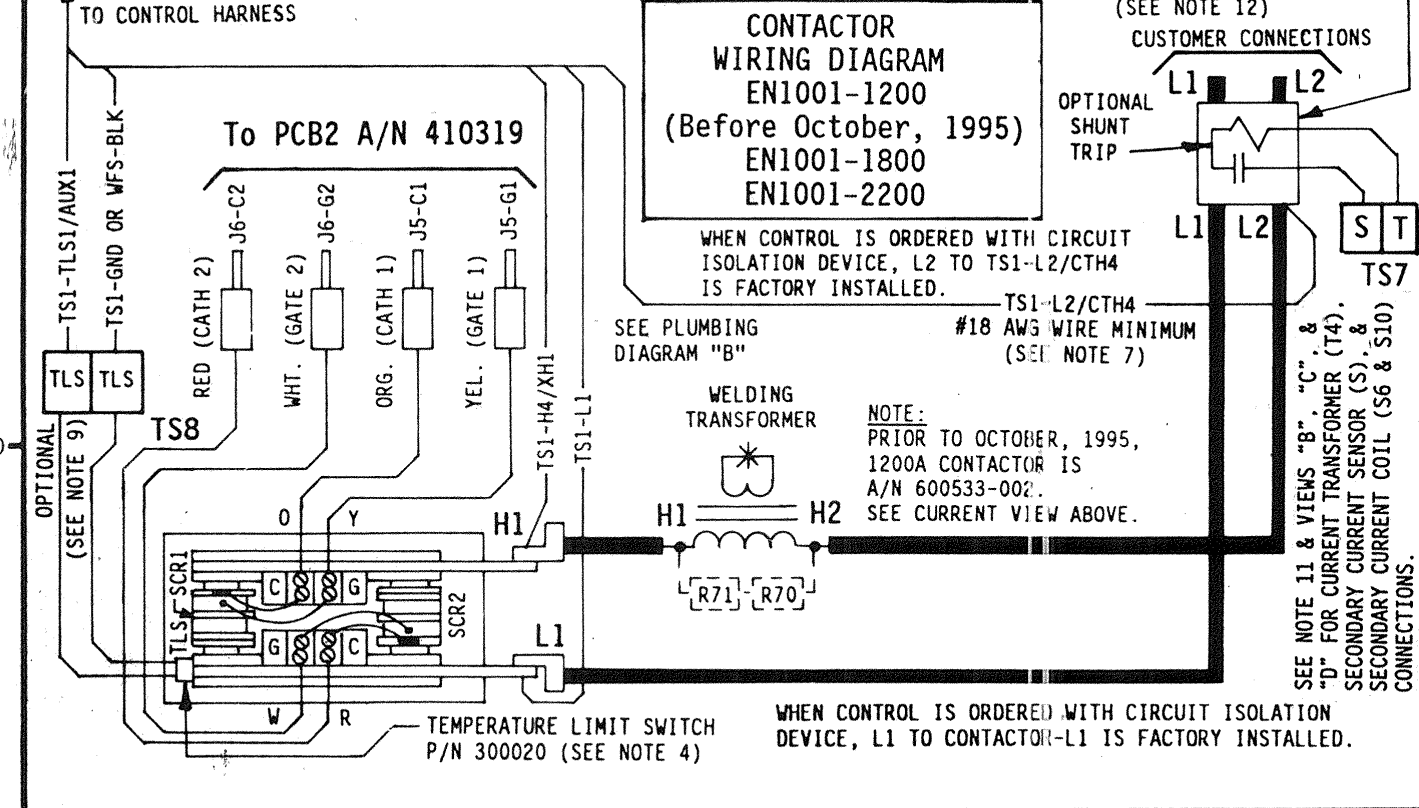


Table with columns: QTY., DESIG., PART NO., DESCRIPTION. Lists various components like PCB1, SW1, J232, J232, PCB5, J4-J4, PWR.LT., WLD.LT., J2-J2, J3.

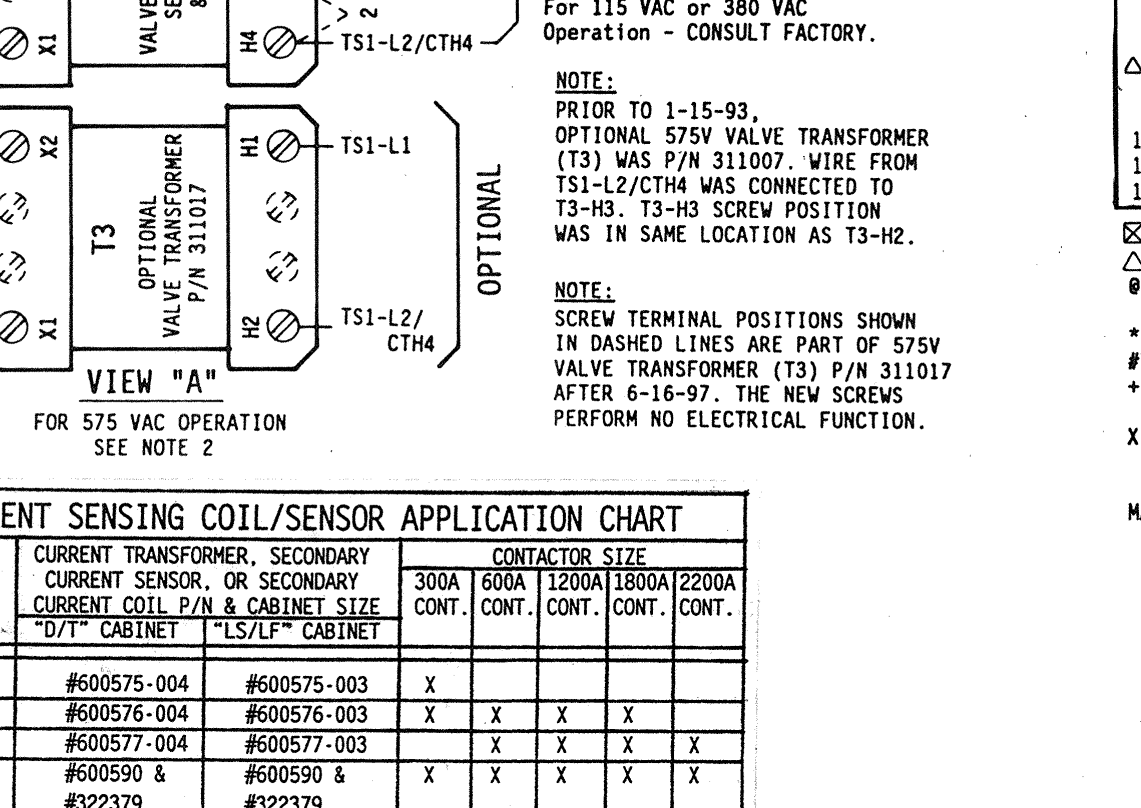
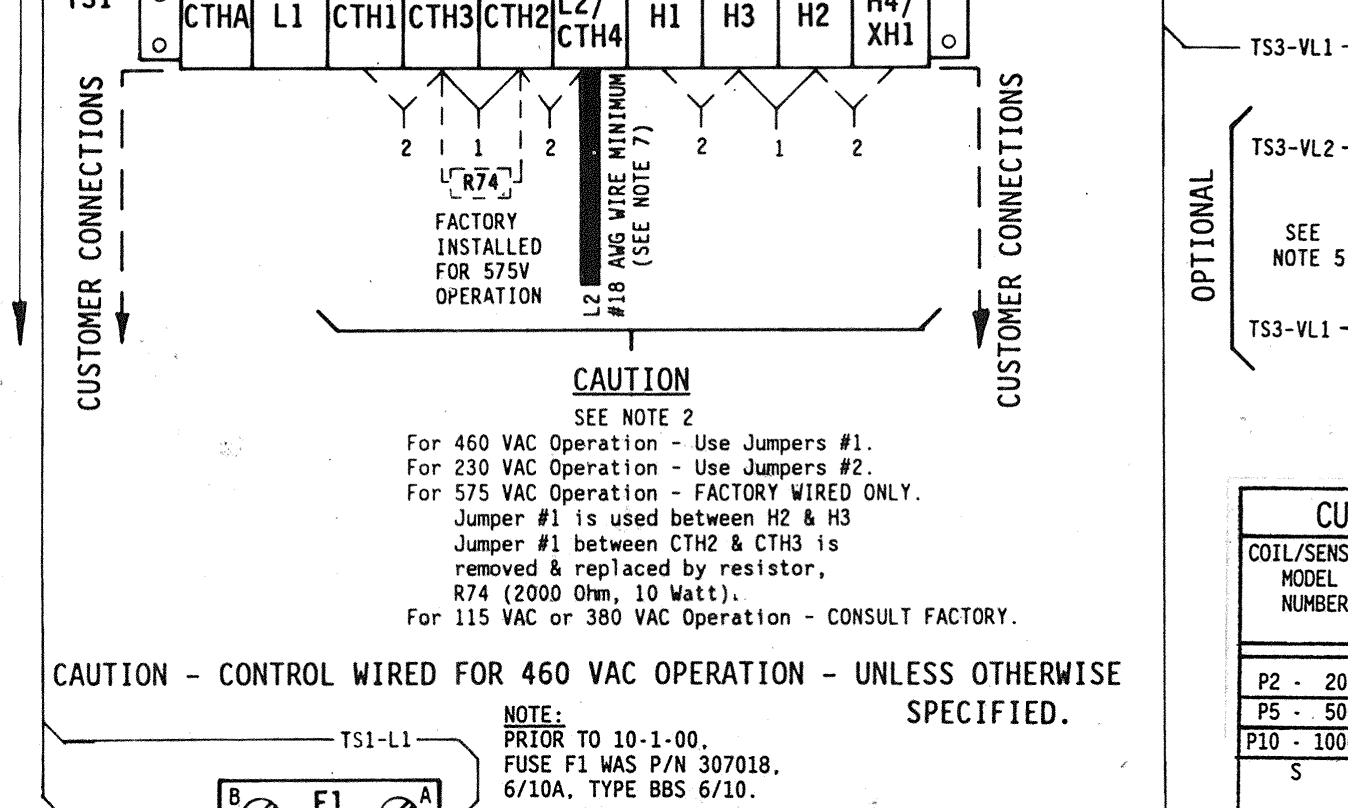
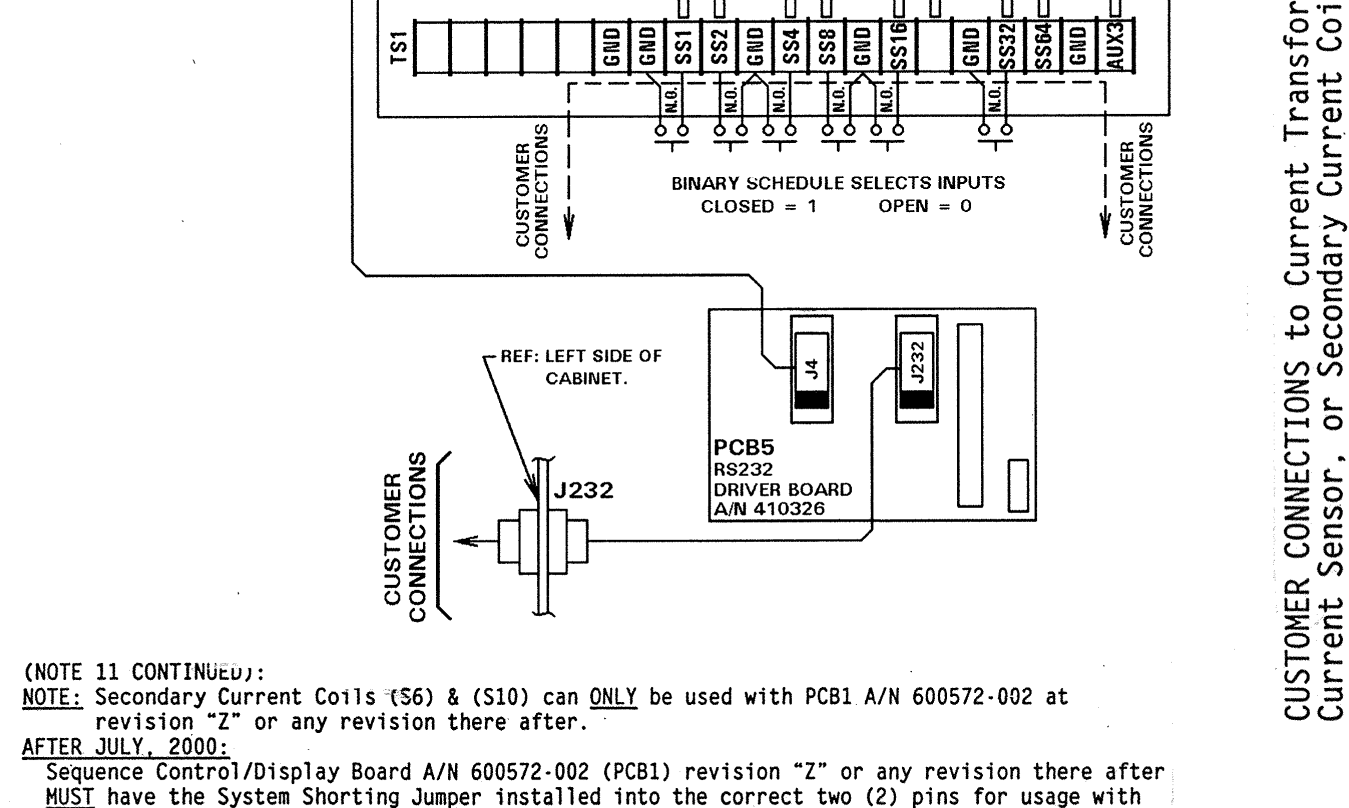
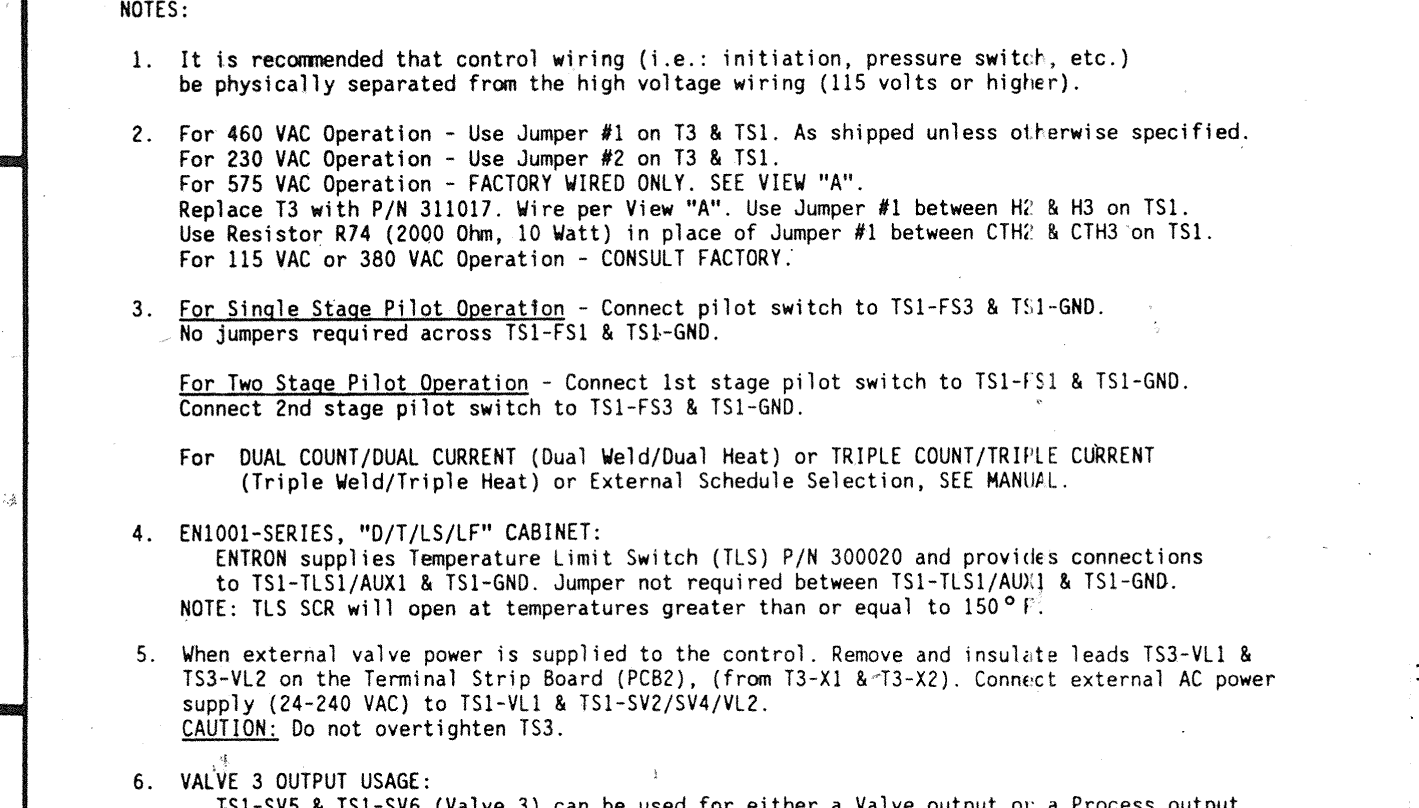


Table with columns: QTY., DESIG., PART NO., DESCRIPTION. Lists various components like PCB1, SW1, J232, J232, PCB5, J4-J4, PWR.LT., WLD.LT., J2-J2, J3.

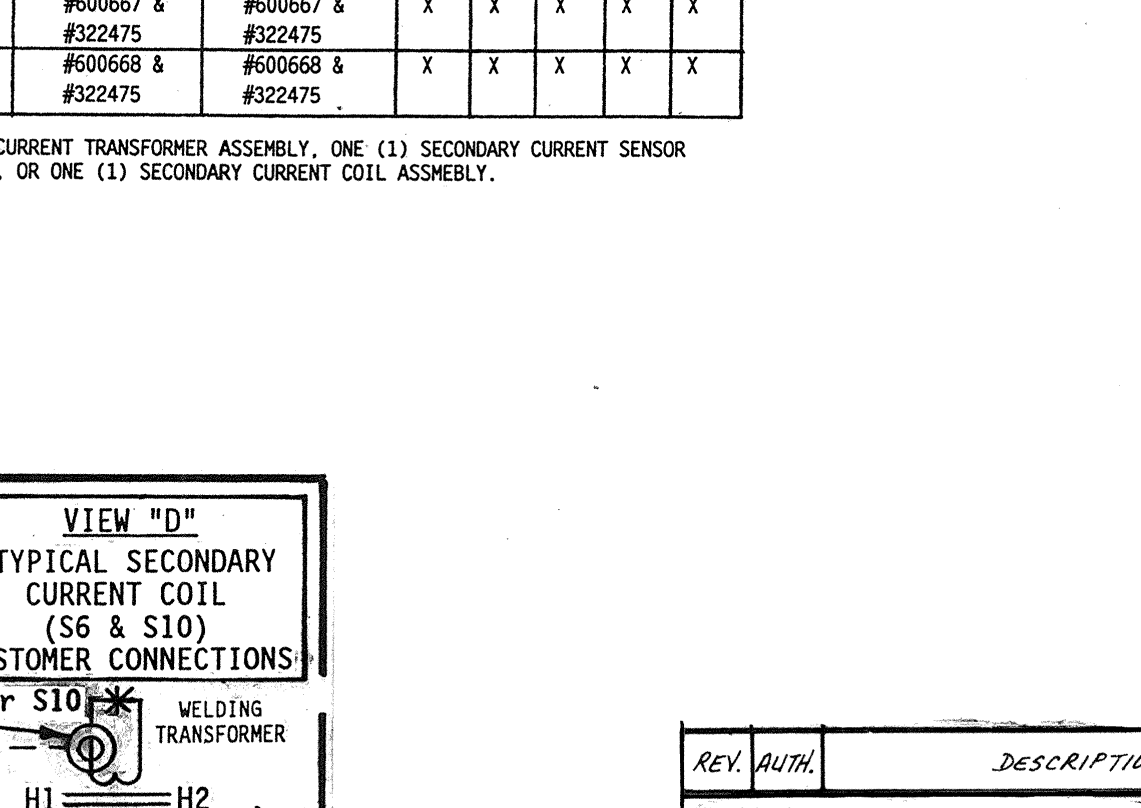
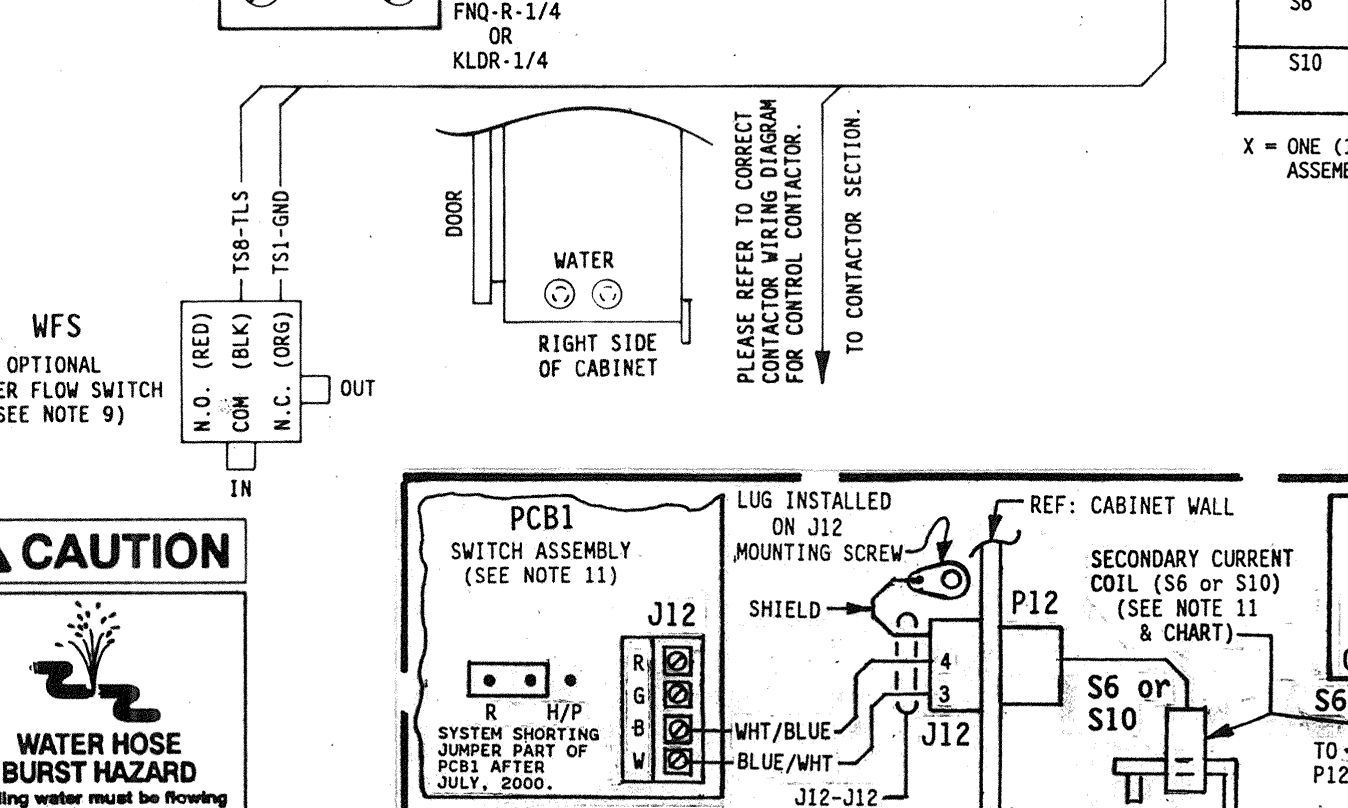
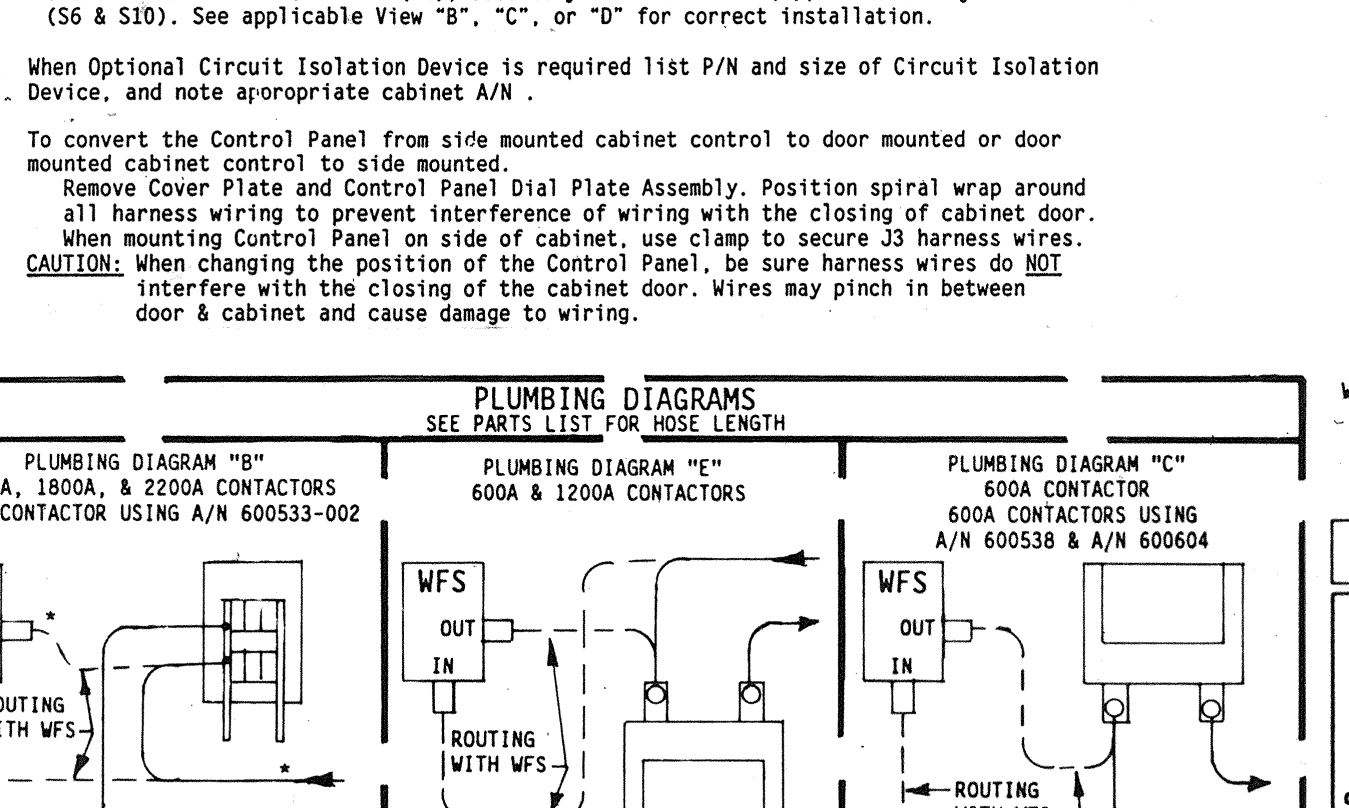
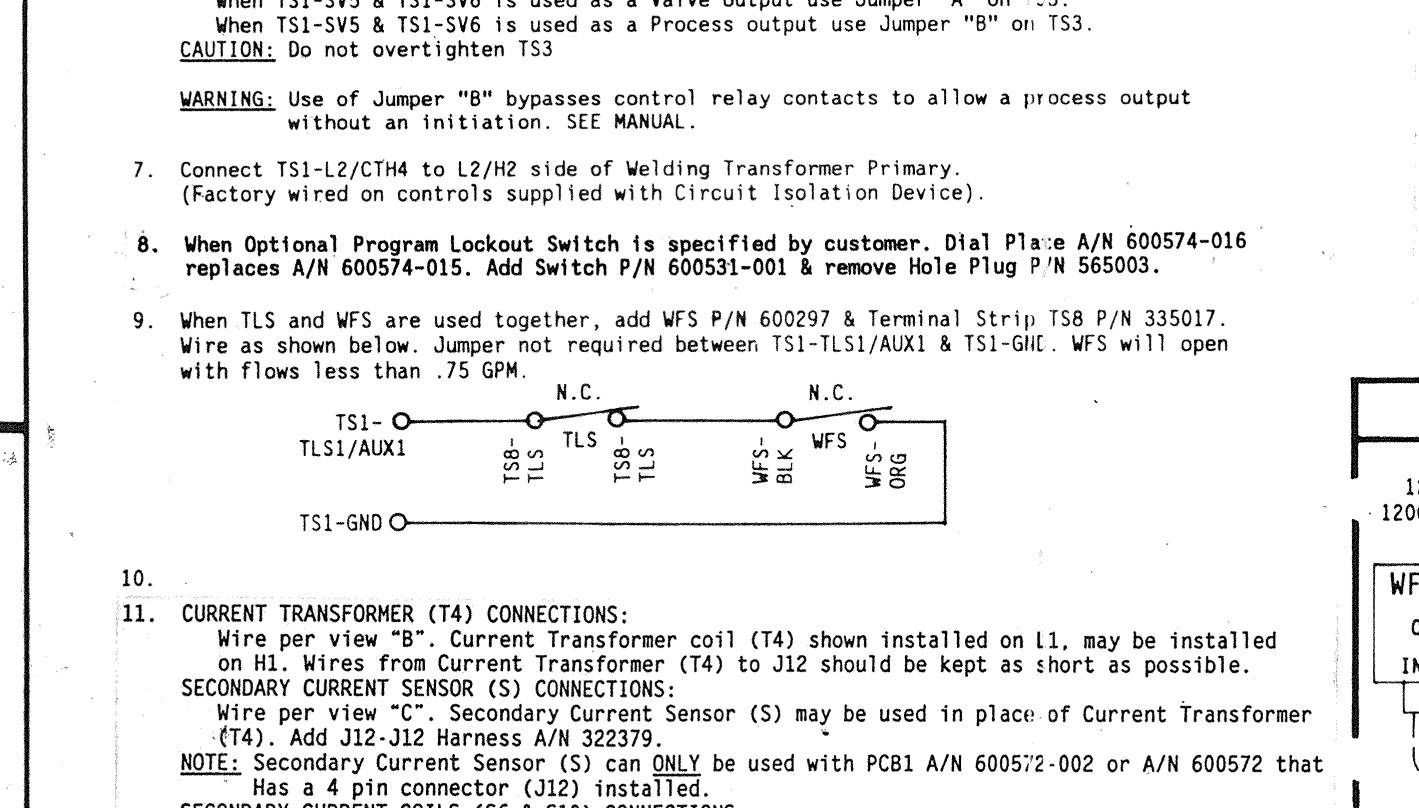


Table with columns: QTY., DESIG., PART NO., DESCRIPTION. Lists various components like PCB1, SW1, J232, J232, PCB5, J4-J4, PWR.LT., WLD.LT., J2-J2, J3.

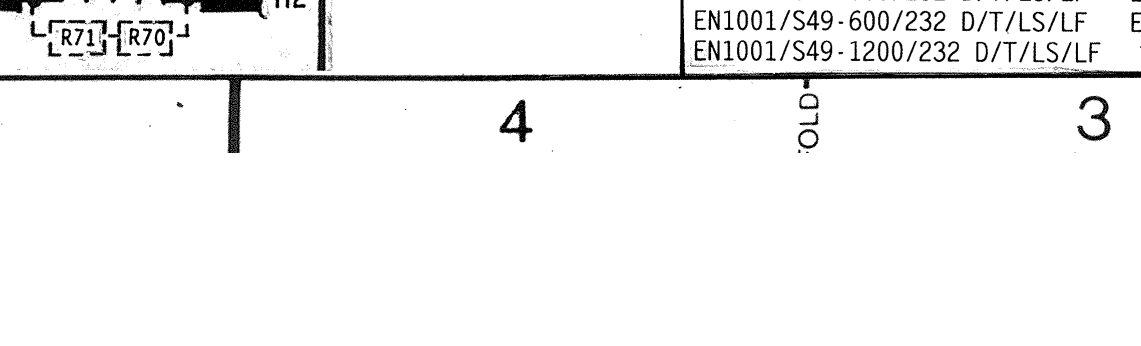
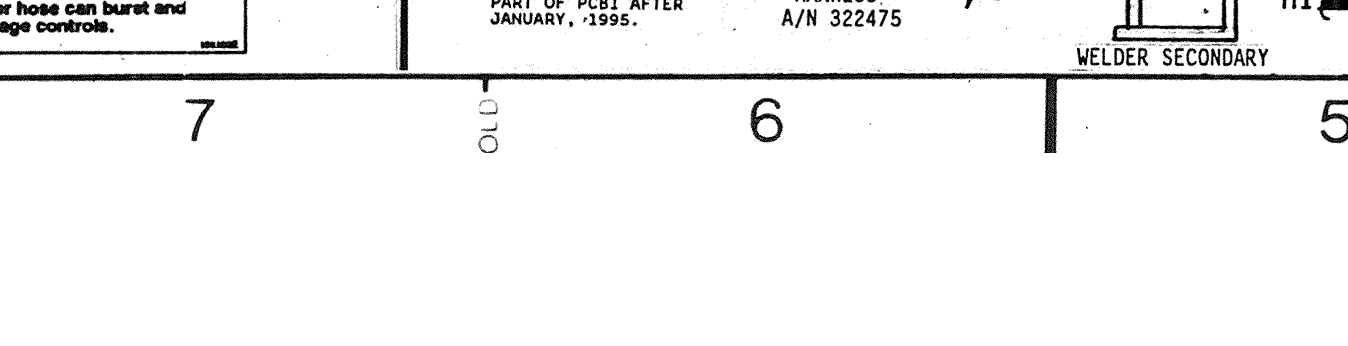
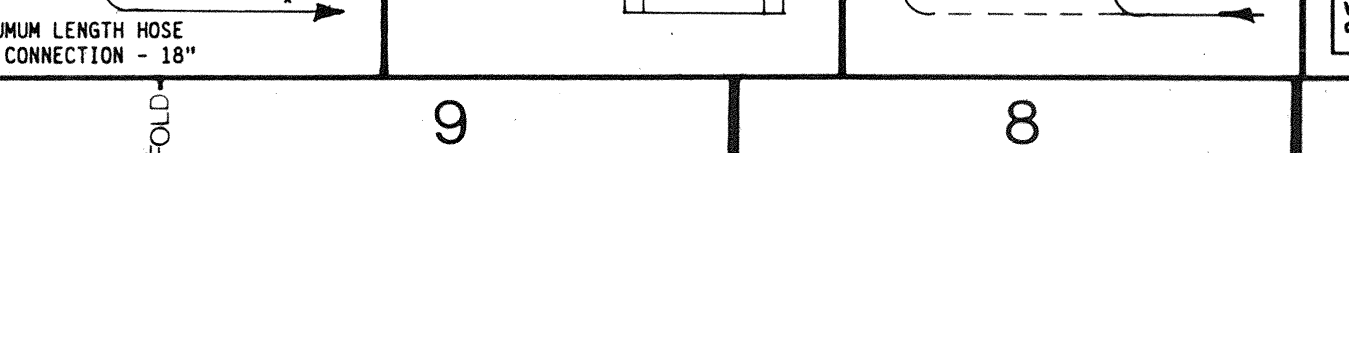
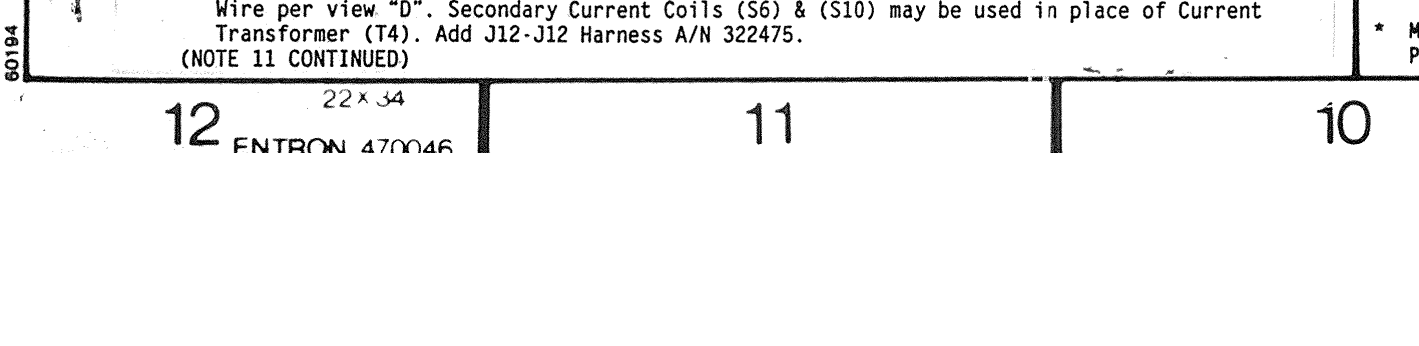


Table with columns: QTY., DESIG., PART NO., DESCRIPTION. Lists various components like PCB1, SW1, J232, J232, PCB5, J4-J4, PWR.LT., WLD.LT., J2-J2, J3.