

CAUTION - READ MANUAL & ALL NOTES BEFORE INSTALLING OR OPERATING CONTROL. SEE NOTE 1. NO CIRCUIT CALIBRATION OR ADJUSTMENT EVER REQUIRED.

DANGER HAZARDOUS VOLTAGE FROM ONE OR MORE SOURCES Turn off all voltage sources before touching any components.

NOTICE FOR SERVICE ON THIS CONTROL Contact Your Machine Dealer Or ENTRON CONTROLS LLC.

Table with 4 columns: QTY., DESIG., PART NO., DESCRIPTION. Lists various components like Dial Plate, Transformer, and Lamp.

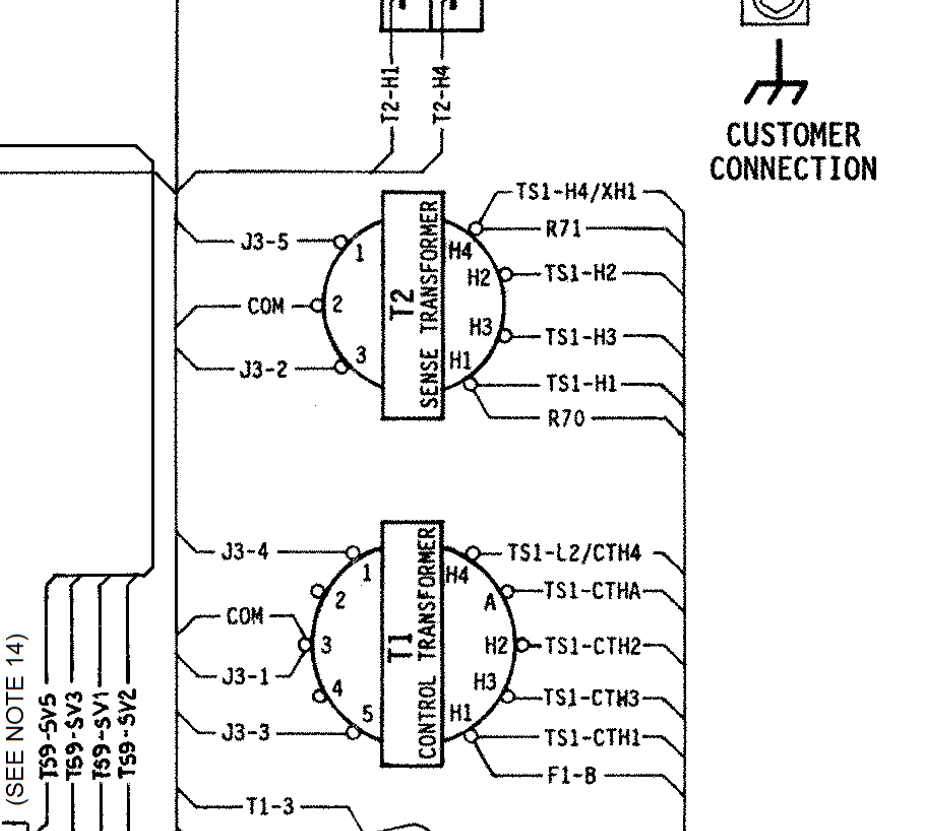
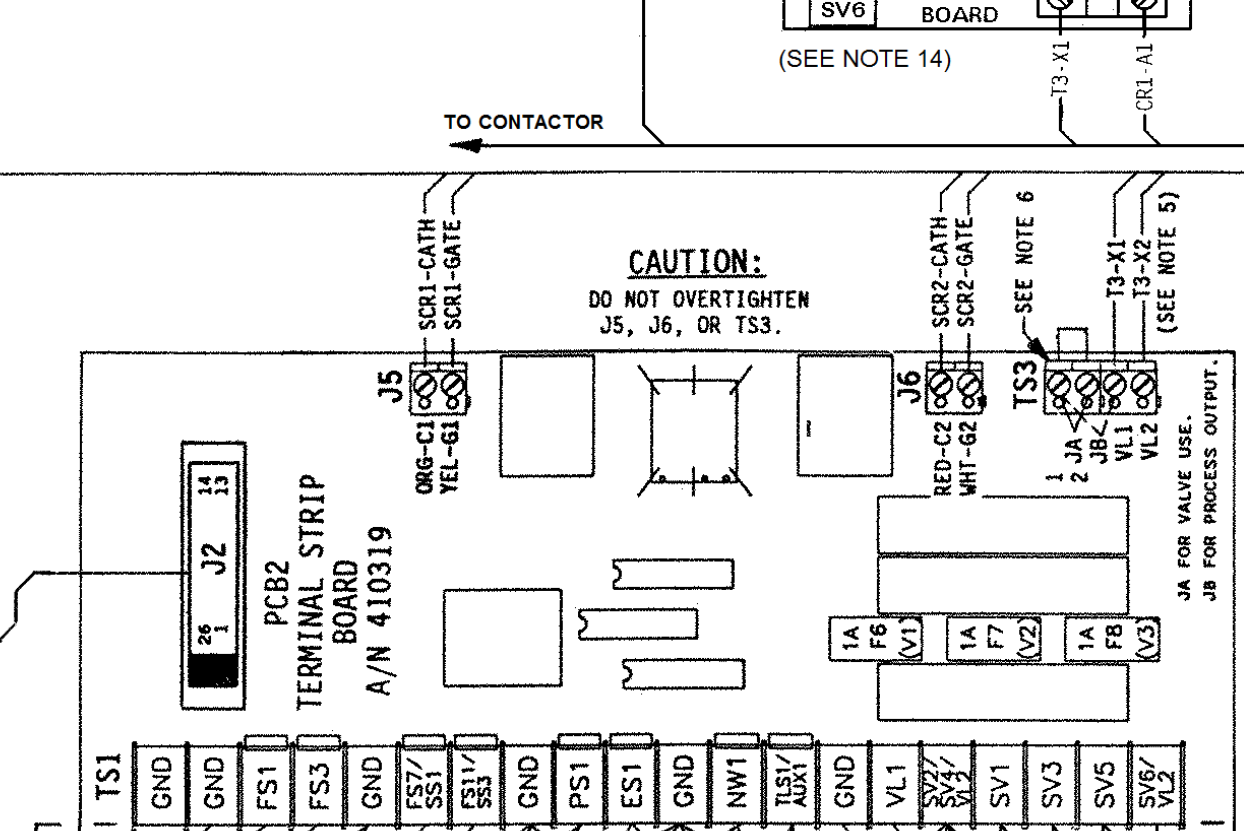
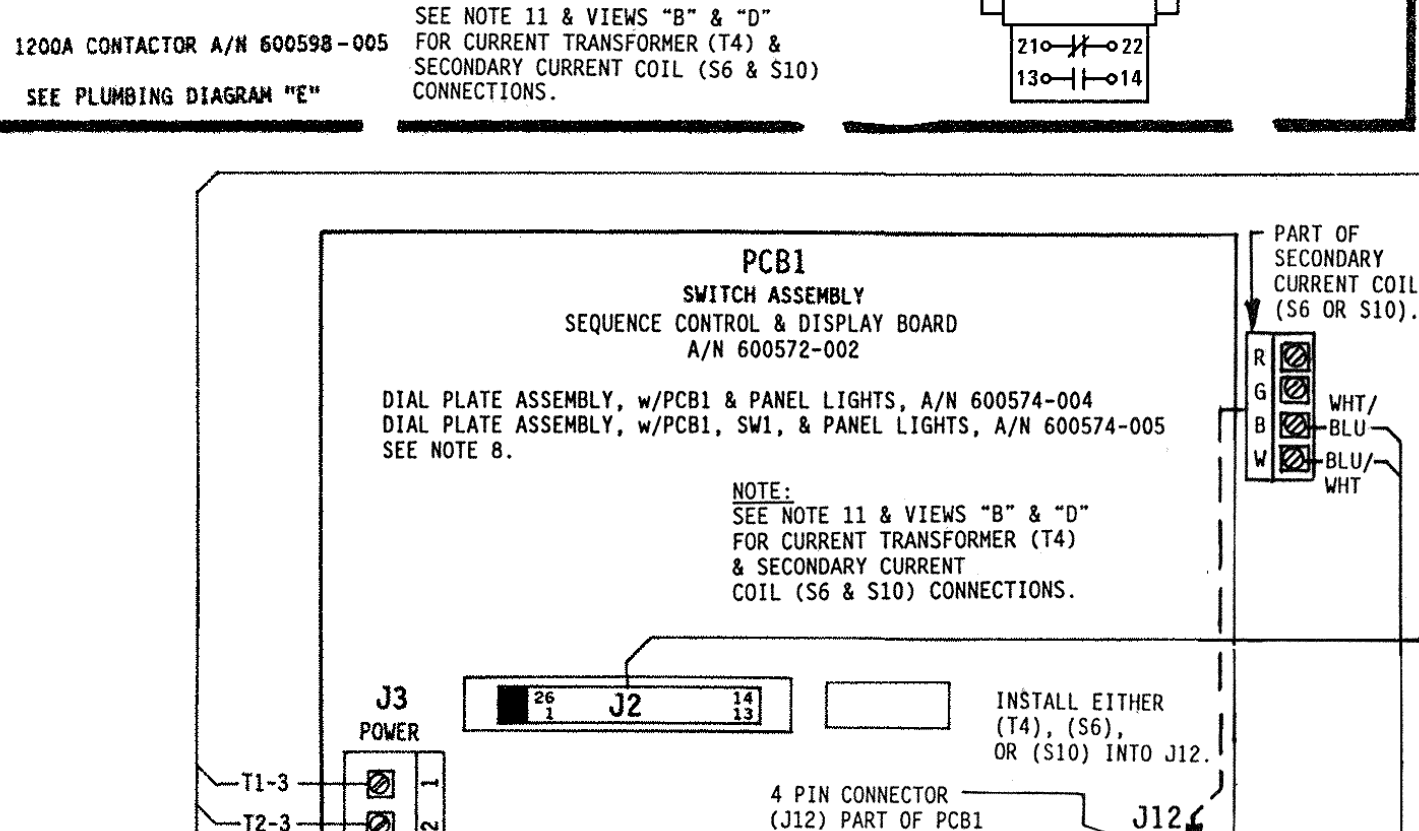
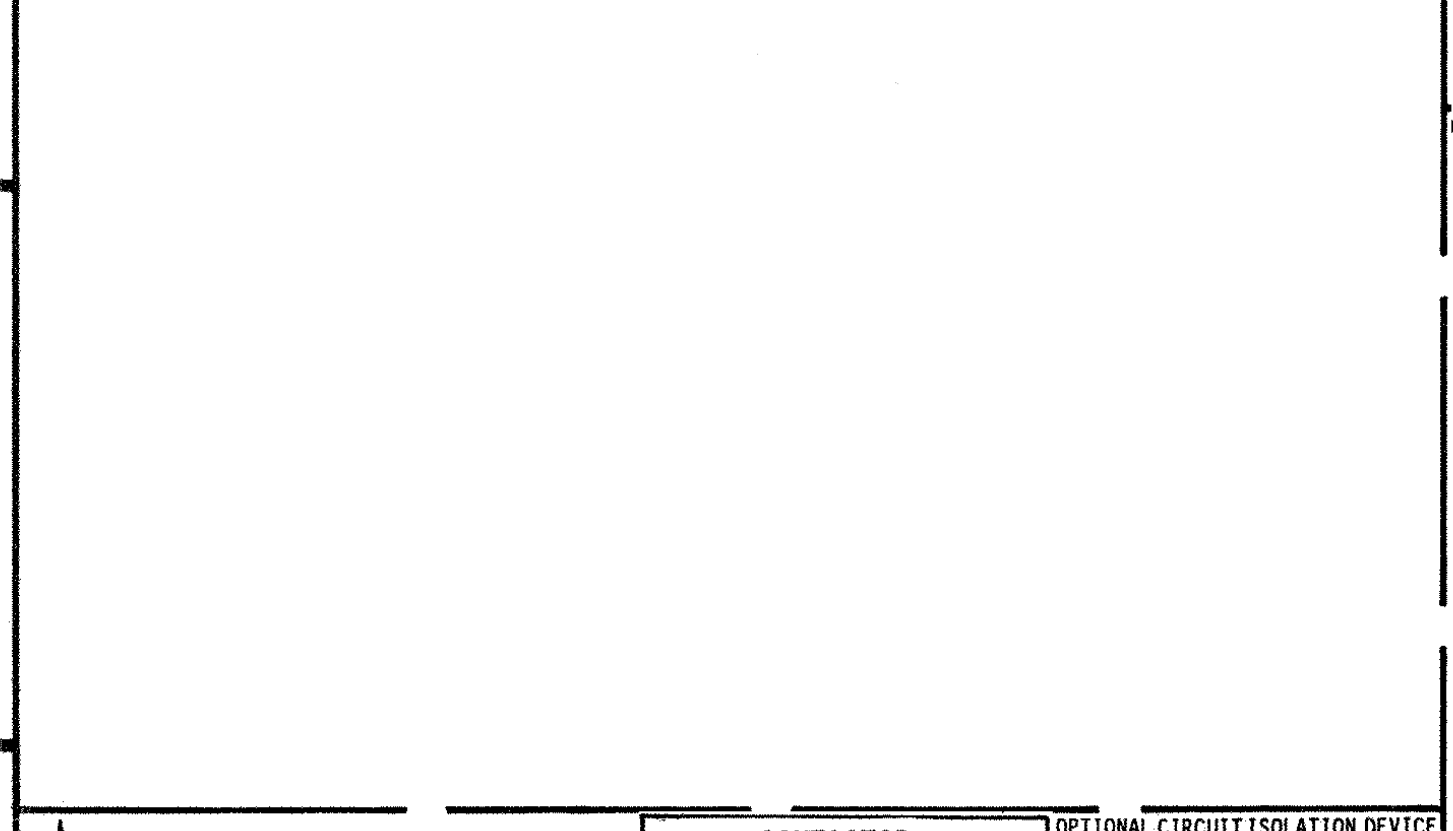


Table with 4 columns: QTY., DESIG., PART NO., DESCRIPTION. Lists various components like Terminal Strip, Transformer, and Fuse.

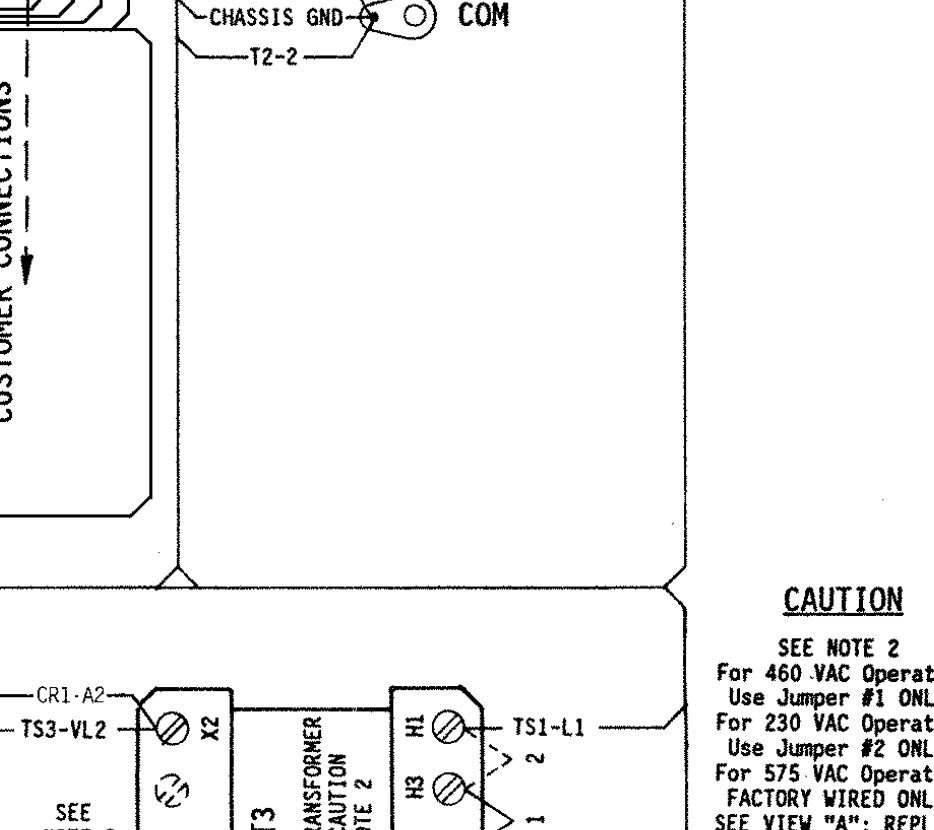
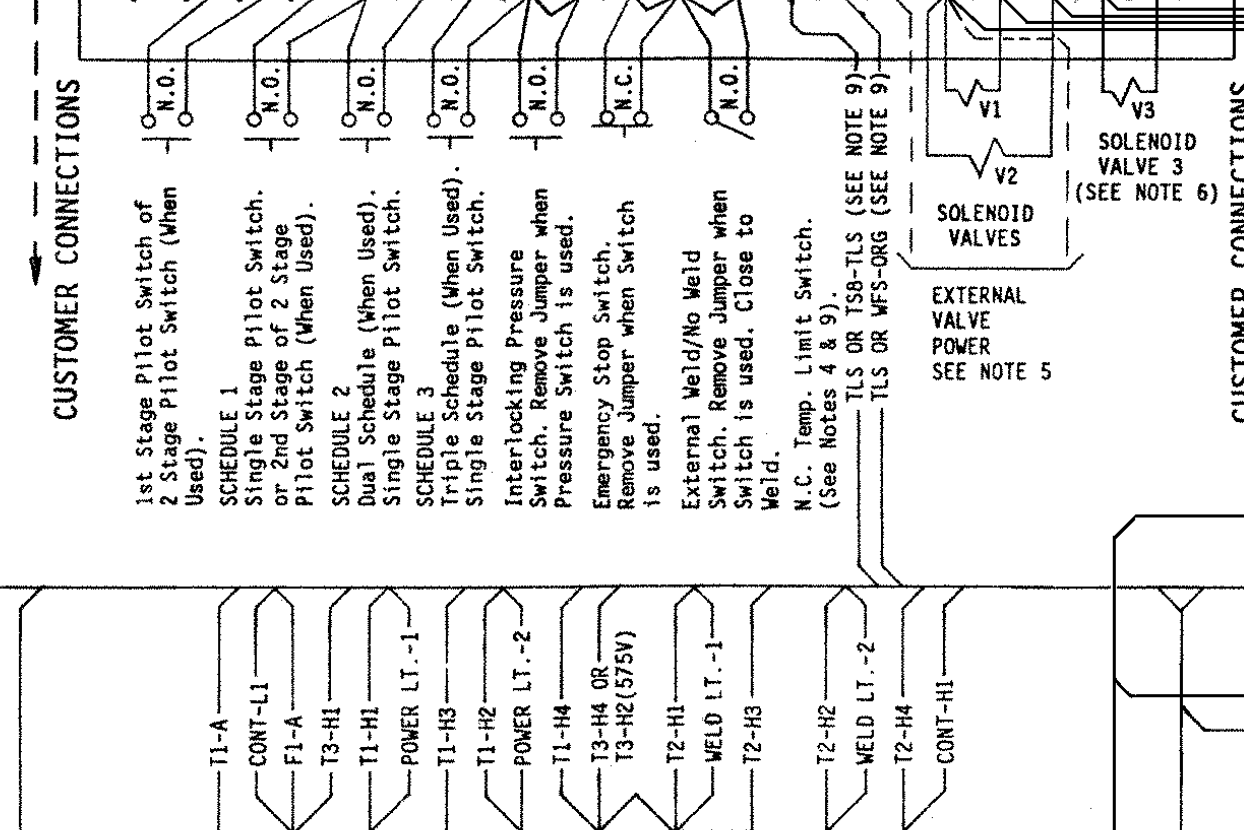
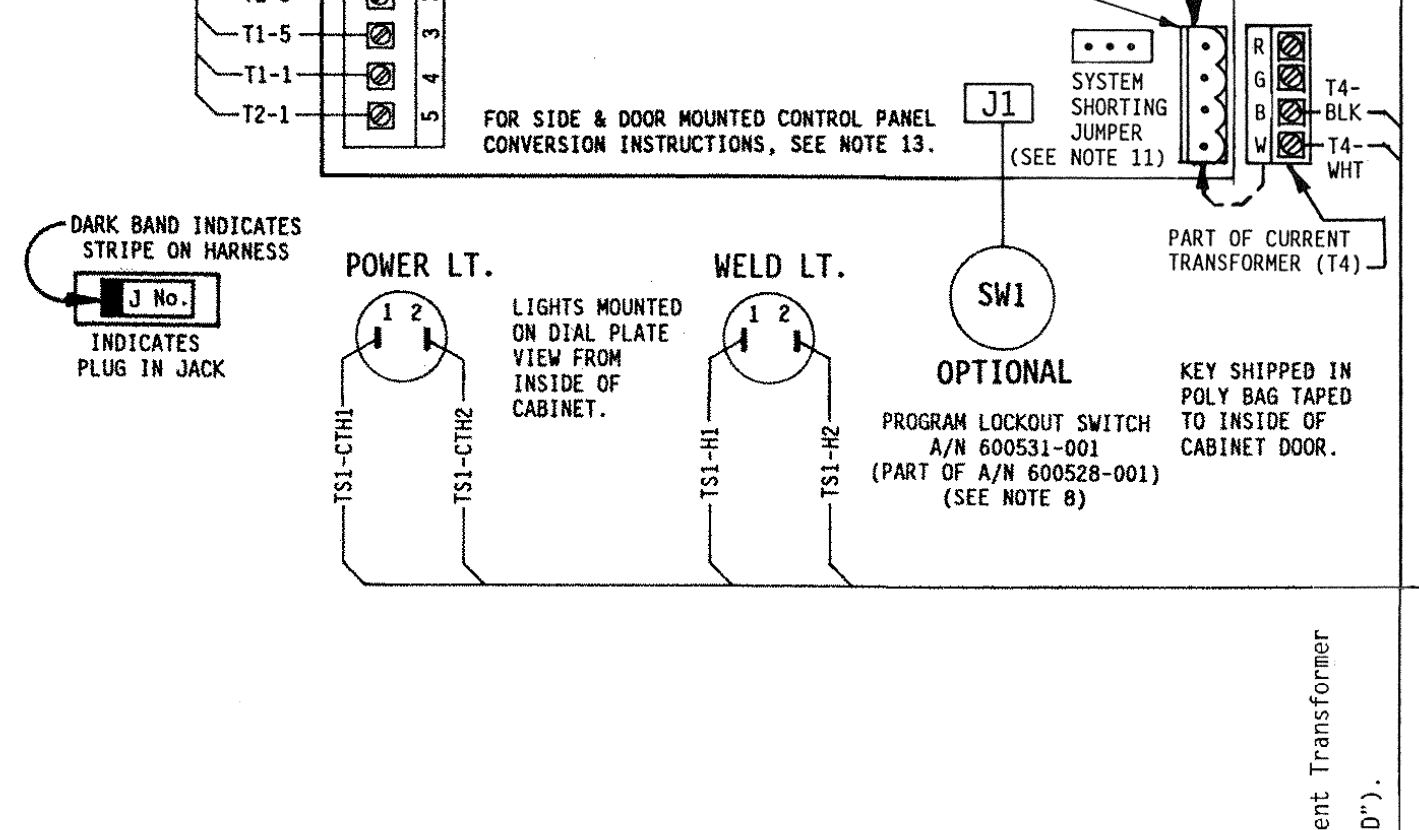
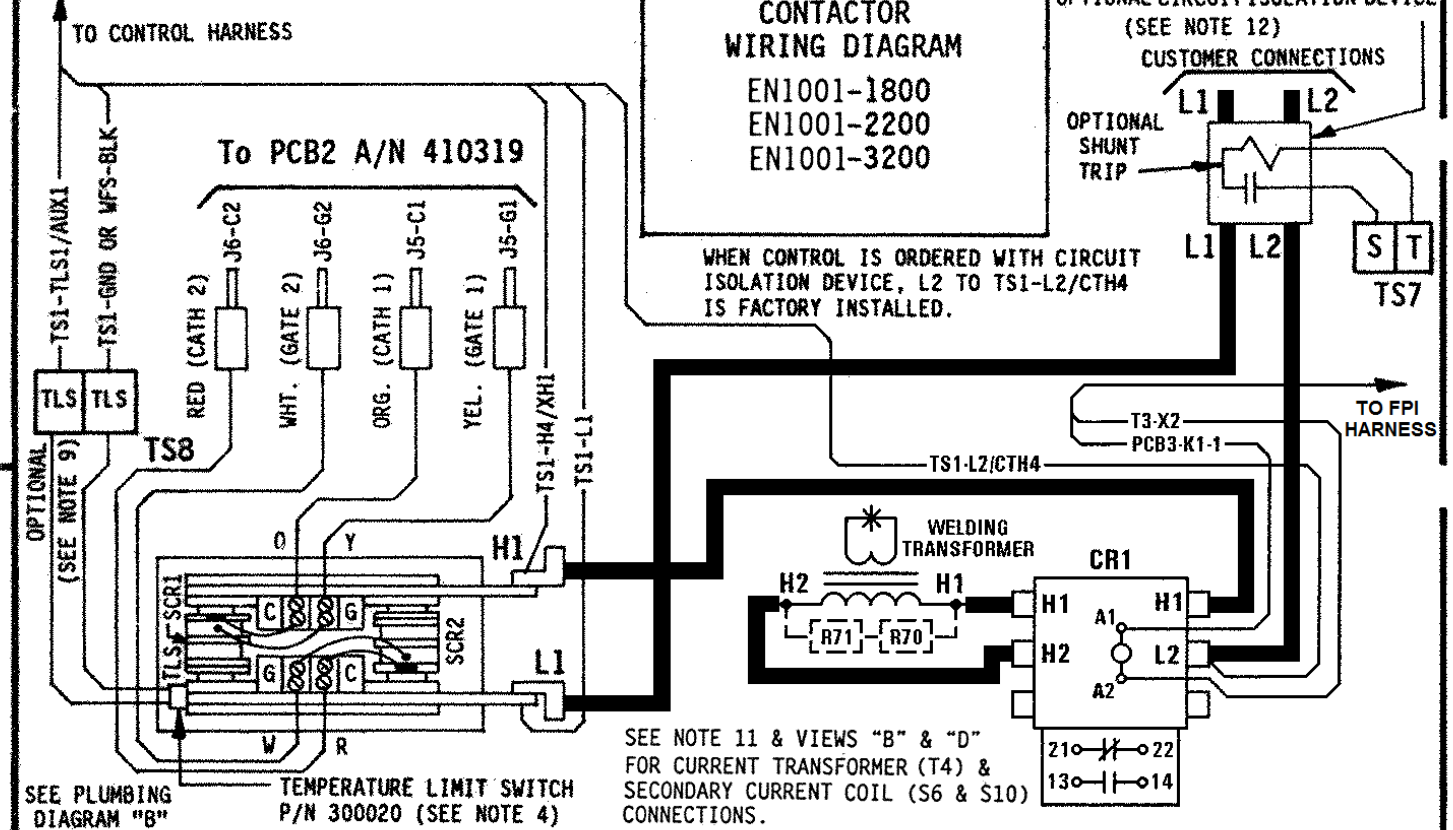


Table with 4 columns: QTY., DESIG., PART NO., DESCRIPTION. Lists various components like Terminal Strip, Transformer, and Fuse.

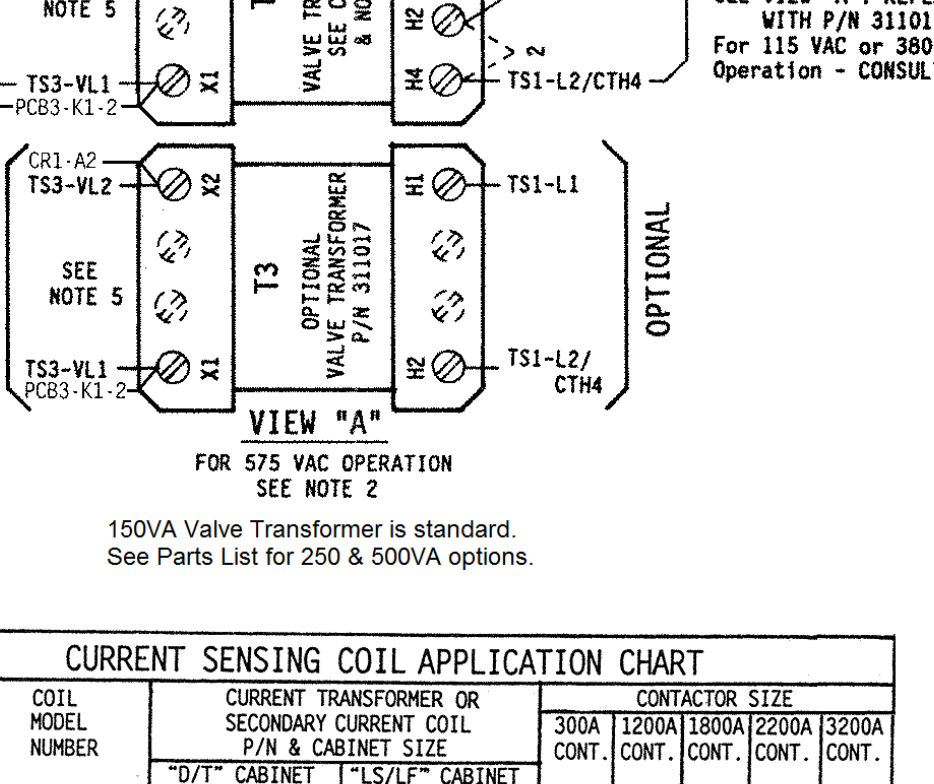
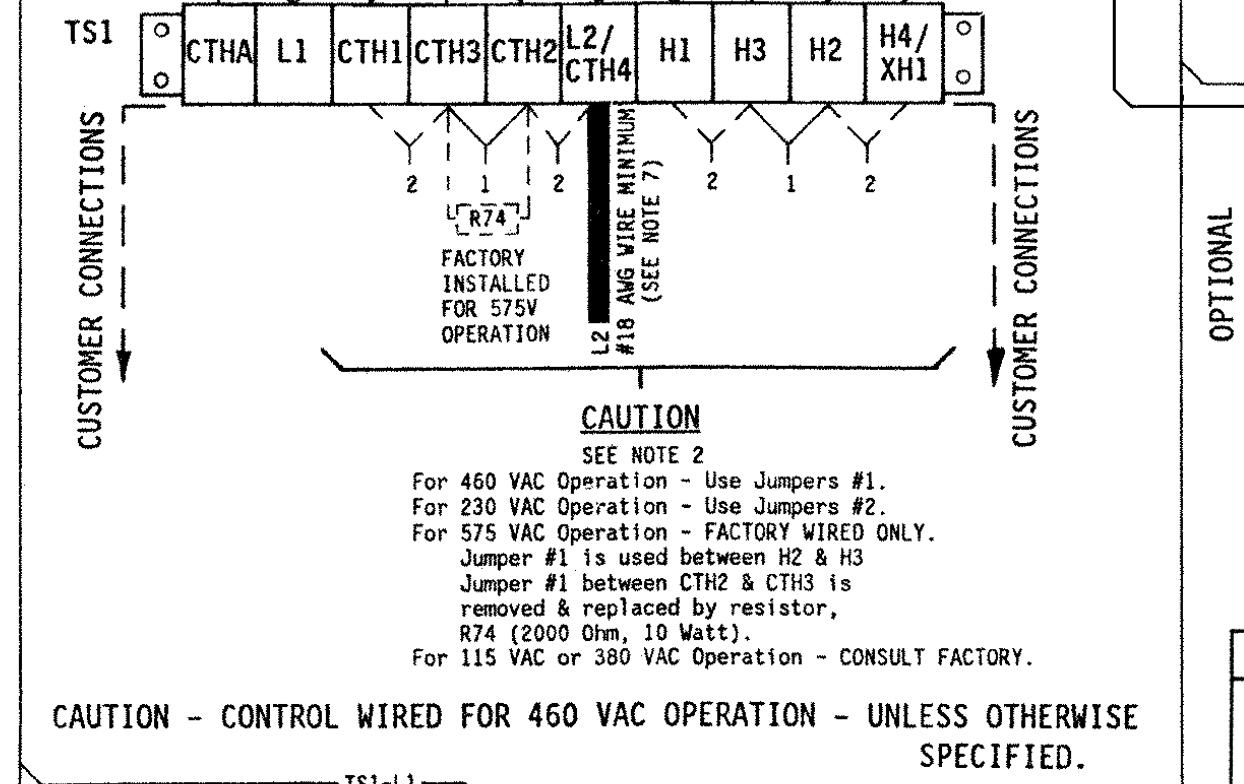
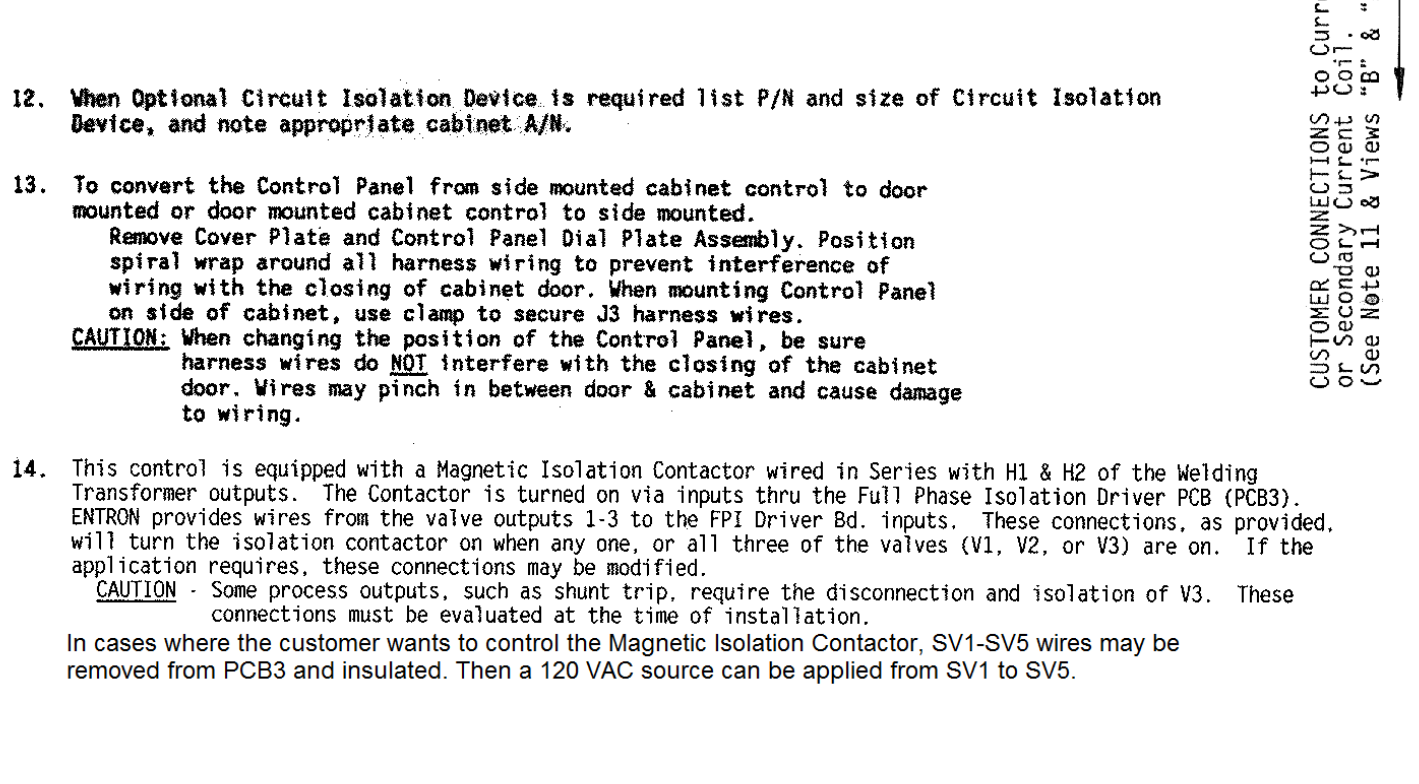
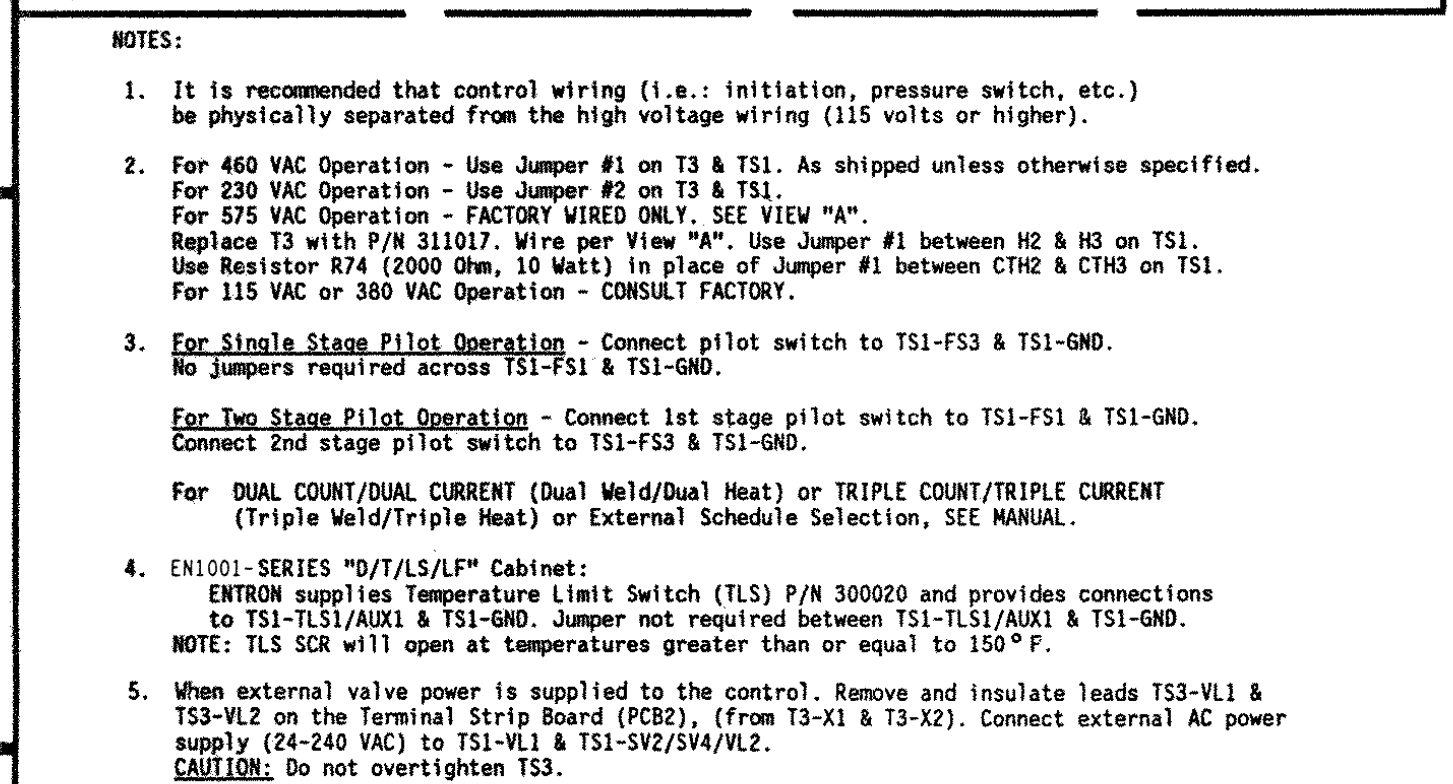


Table with 4 columns: QTY., DESIG., PART NO., DESCRIPTION. Lists various components like Terminal Strip, Transformer, and Fuse.

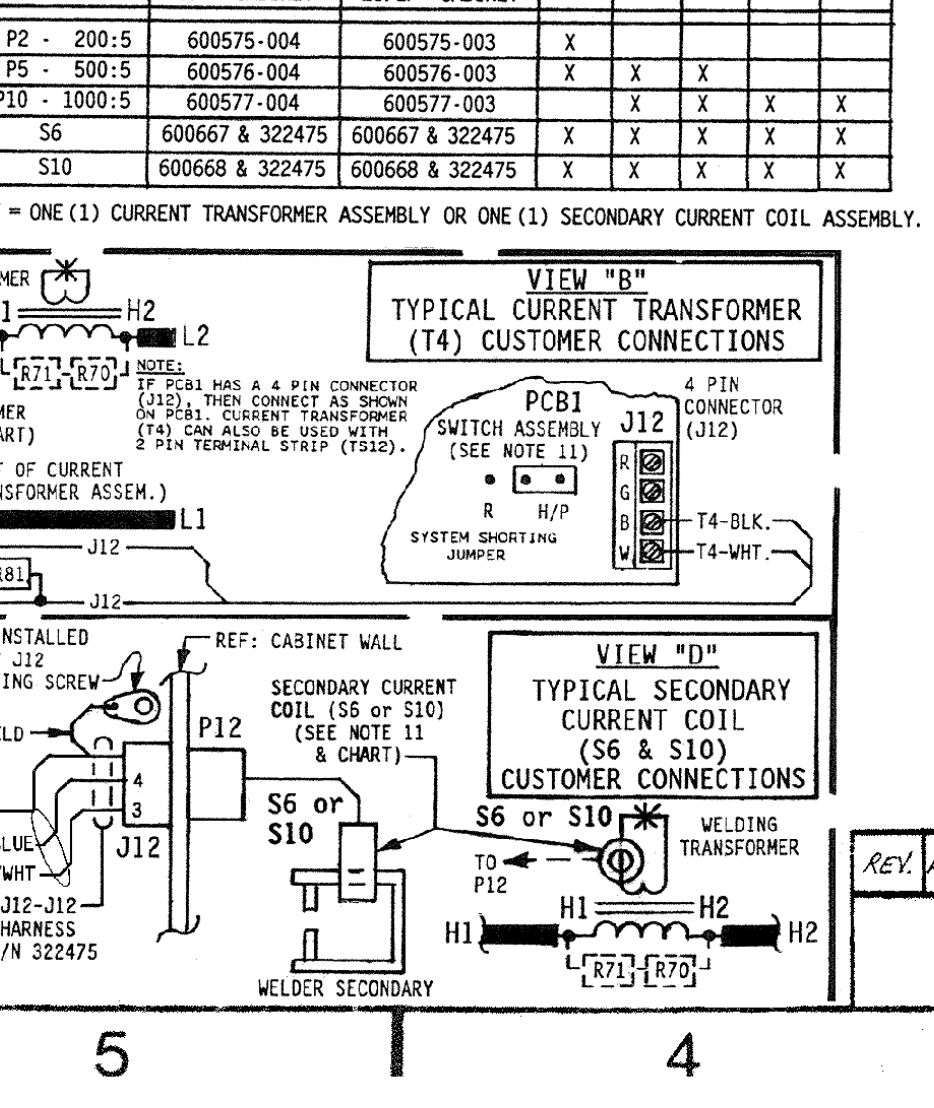
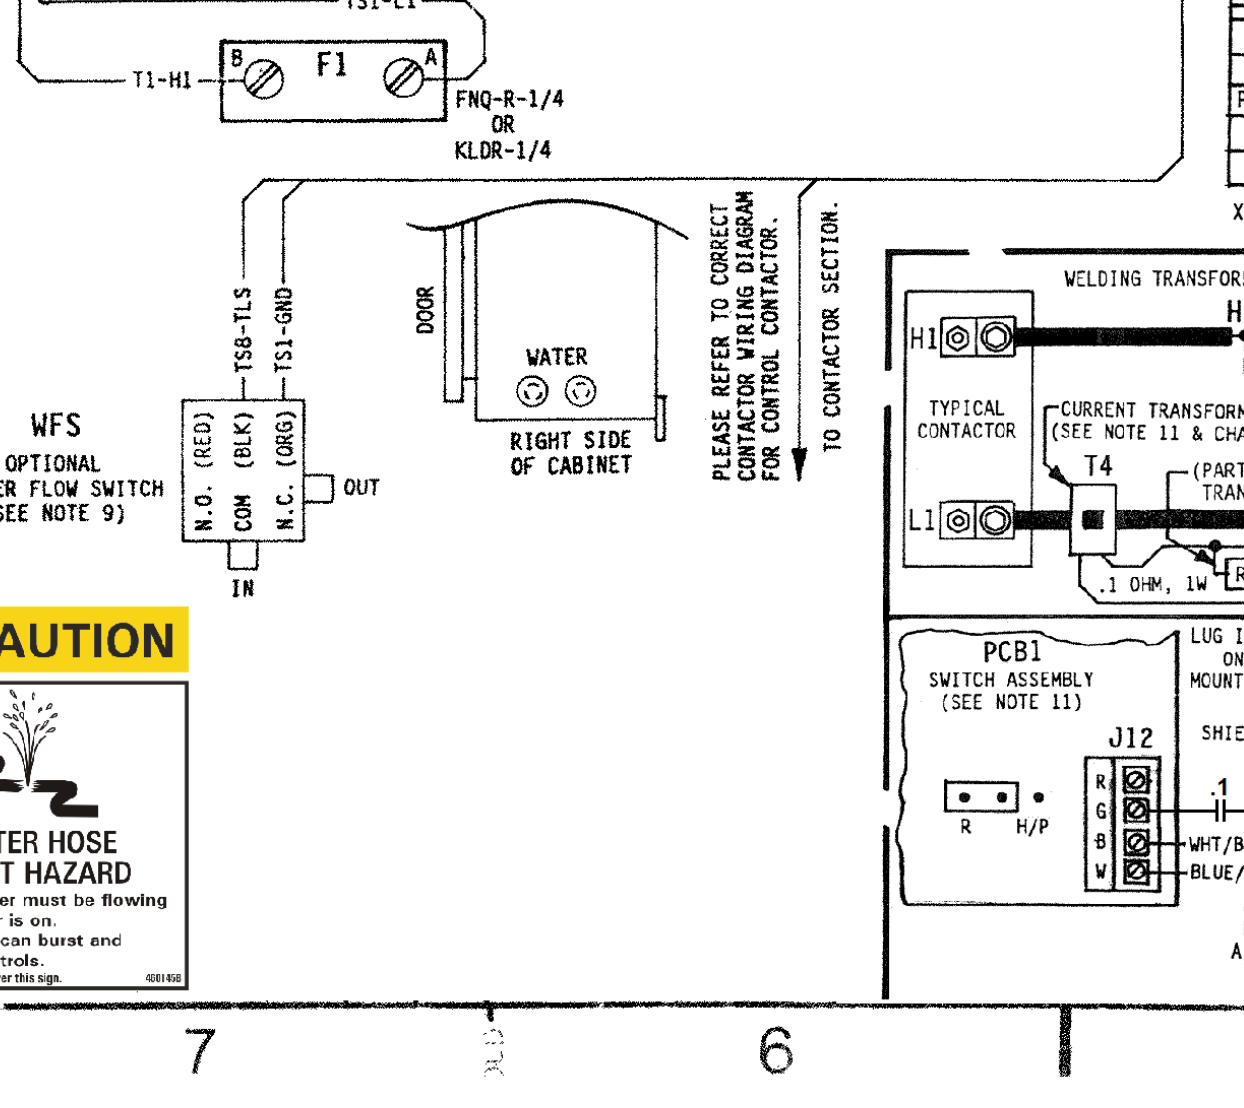
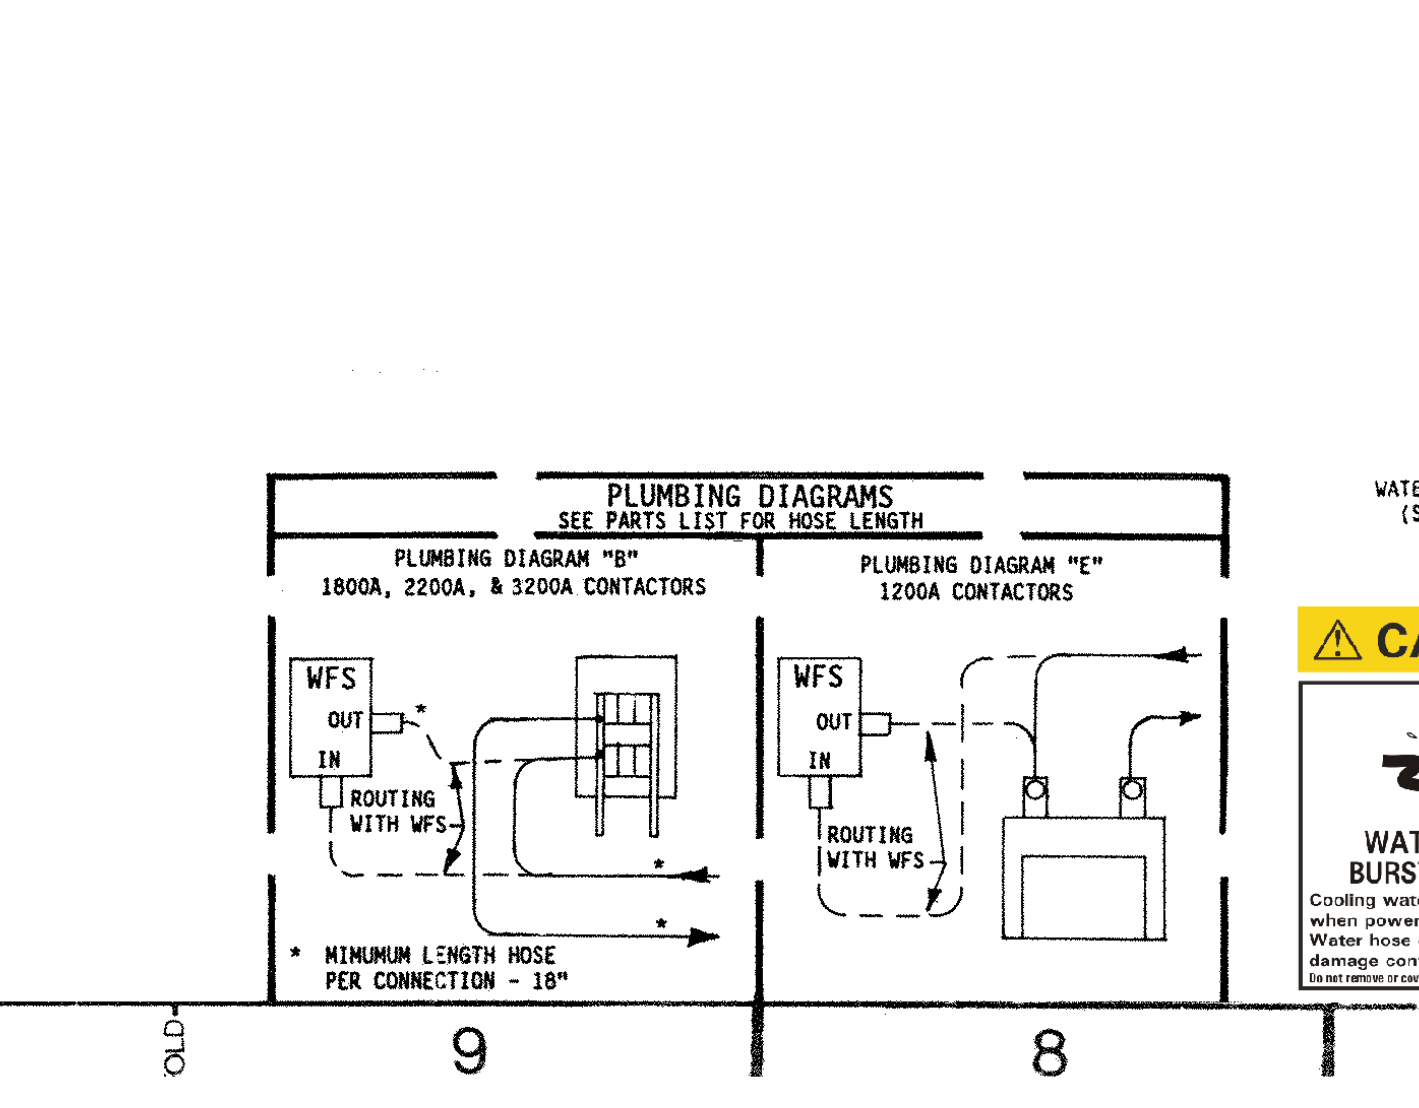
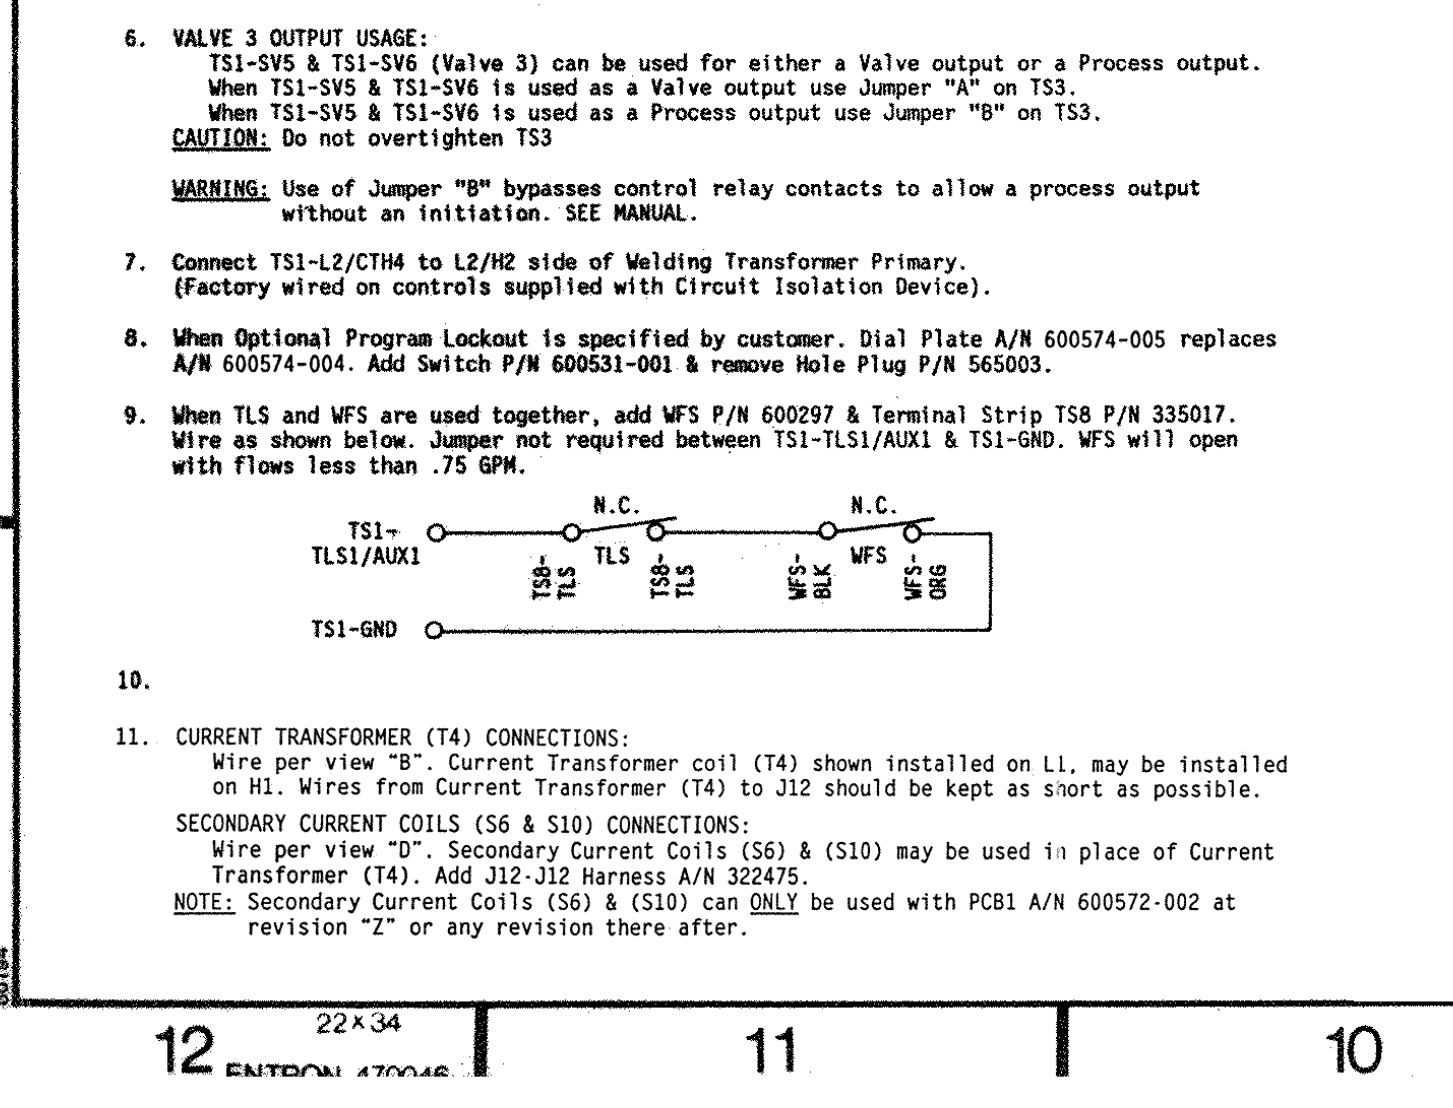


Table with 4 columns: QTY., DESIG., PART NO., DESCRIPTION. Lists various components like Terminal Strip, Transformer, and Fuse.