CAUTION - READ MANUAL & ALL NOTES BEFORE INSTALLING OR OPERATING CONTROL. SEE NOTE 1.

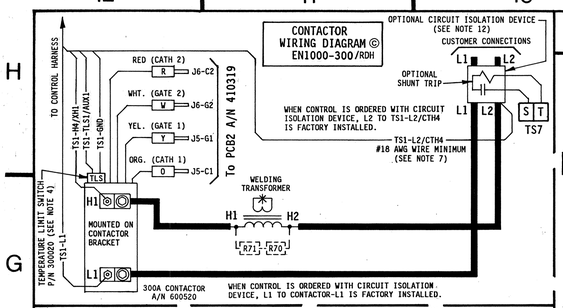

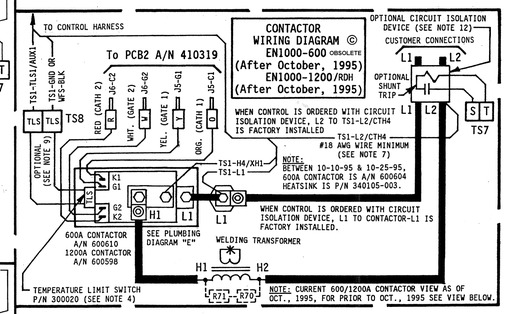

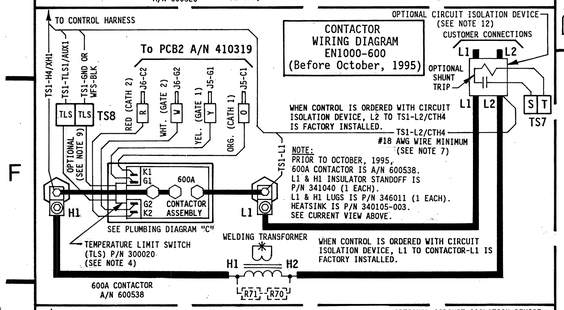

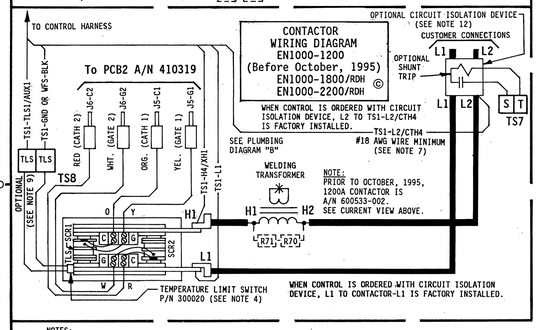

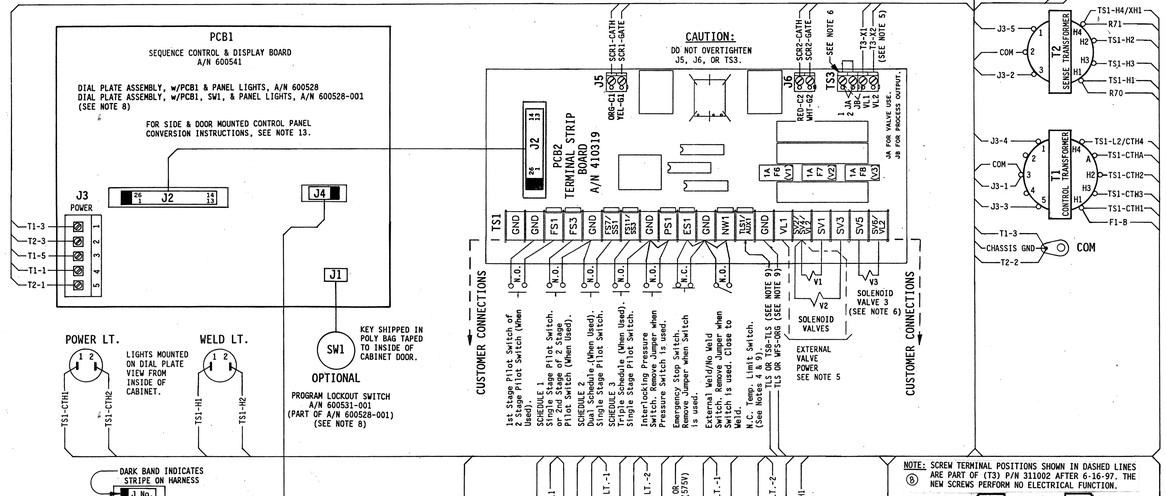

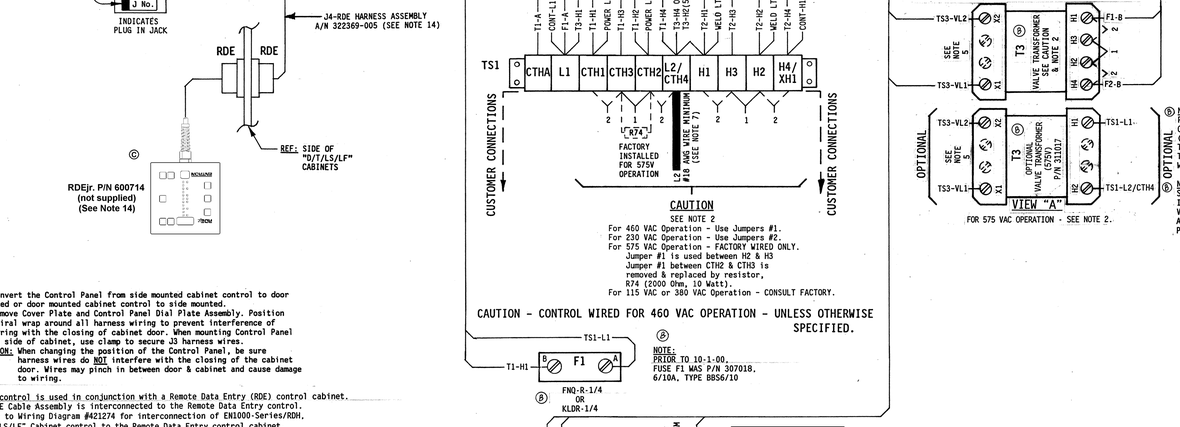

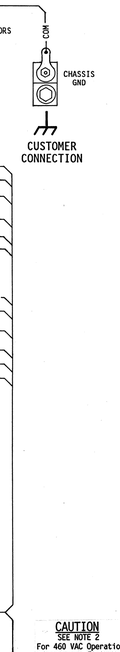

DANGER

HAZARDOUS VOLTAGE FROM ONE OR MORE SOURCES
Turn off all voltage sources before touching any components.
Electrical shock or flash will cause severe injury or death.
Do not remove or cover this sign. 600528

NOTES:

1. It is recommended that control wiring (i.e.: initiation, pressure switch, etc.) be physically separated from the high voltage wiring (115 volts or higher).
2. For 460 VAC Operation - Use Jumper #1 on T3 & TS1. As shipped unless otherwise specified. For 230 VAC Operation - Use Jumper #2 on T3 & TS1. For 575 VAC Operation - FACTORY WIRED ONLY. SEE VIEW "A". Replace T3 with P/N 311017. Wire per View "A". Use Jumper #1 between H2 & H3 on TS1. Use Resistor R74 (2000 Ohm, 10 Watt) in place of Jumper #1 between CTH2 & CTH3 on TS1. For 115 VAC or 380 VAC Operation - CONSULT FACTORY.
3. For Single Stage Pilot Operation - Connect pilot switch to TS1-FS3 & TS1-GND. No jumpers required across TS1-FS1 & TS1-GND.
   For Two Stage Pilot Operation - Connect 1st stage pilot switch to TS1-FS1 & TS1-GND. Connect 2nd stage pilot switch to TS1-FS3 & TS1-GND.
   For DUAL COUNT/DUAL CURRENT (Dual Weld/Dual Heat) or TRIPLE COUNT/TRIPLE CURRENT (Triple Weld/Triple Heat) or External Schedule Selection, SEE MANUAL.
4. EN1000-SERIES "D/T/LS/LF" Cabinet: ENTRON supplies Temperature Limit Switch (TLS) P/N 300020 and provides connections to TS1-TLS1/AUX1 & TS1-GND. Jumper not required between TS1-TLS1/AUX1 & TS1-GND. NOTE: TLS SCR will open at temperatures greater than or equal to 150 °F.
5. When external valve power is supplied to the control. Remove and insulate leads TS3-VL1 & TS3-VL2 on the Terminal Strip Board (PCB2), (from T3-X1 & T3-X2). Connect external AC power supply (24-240 VAC) to TS1-VL1 & TS1-SV2/SV4/VL2. CAUTION: Do not overtighten TS3.
6. VALVE 3 OUTPUT USAGE: TS1-SV5 & TS1-SV6 (Valve 3) can be used for either a Valve output or a Process output. When TS1-SV5 & TS1-SV6 is used as a Valve output use Jumper "A" on TS3. When TS1-SV5 & TS1-SV6 is used as a Process output use Jumper "B" on TS3. CAUTION: Do not overtighten TS3
   WARNING: Use of Jumper "B" bypasses control relay contacts to allow a process output without an initiation. SEE MANUAL.
7. Connect TS1-L2/CTH4 to L2/H2 side of Welding Transformer Primary. (Factory wired on controls supplied with Circuit Isolation Device).
8. When Optional Program Lockout is specified by customer. Dial Plate A/N 600528-001 replaces A/N 600528. Add Switch P/N 600531-001 & remove Hole Plug P/N 565003.
9. When TLS and WFS are used together, add WFS P/N 600297 & Terminal Strip TS8 P/N 335017. Wire as shown below. Jumper not required between TS1-TLS1/AUX1 & TS1-GND. WFS will open with flows less than .75 GPM.



10.

11.

12. When Optional Circuit Isolation Device is required list P/N and size of Circuit Isolation Device, and note appropriate cabinet A/N.

13. To convert the Control Panel from side mounted cabinet control to door mounted or door mounted cabinet control to side mounted.
    Remove Cover Plate and Control Panel Dial Plate Assembly. Position spiral wrap around all harness wiring to prevent interference of wiring with the closing of cabinet door. When mounting Control Panel on side of cabinet, use clamp to secure J3 harness wires.
    CAUTION: When changing the position of the Control Panel, be sure harness wires do NOT interfere with the closing of the cabinet door. Wires may pinch in between door & cabinet and cause damage to wiring.

Ⓐ Ⓑ Ⓒ 14. This control is used in conjunction with a Remote Data Entry (RDE) control cabinet. J4-RDE Cable Assembly is interconnected to the Remote Data Entry control. Refer to Wiring Diagram #421274 for interconnection of EN1000-Series/RDH, "D/T/LS/LF" Cabinet control to the Remote Data Entry control cabinet.

PLUMBING DIAGRAMS
SEE PARTS LIST FOR HOSE LENGTH

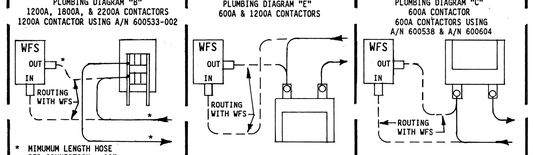

NO CIRCUIT CALIBRATION OR ADJUSTMENT EVER REQUIRED.

CAUTION
WATER HOSE BURST HAZARD
Cooling water must be flowing when power is on.
Water hose can burst and damage controls.
Do not remove or cover this sign. 600529

NOTICE
FOR SERVICE ON THIS CONTROL
Contact Your Machine Dealer Or
ENTRON CONTROLS LLC.
DIRECTLY: (864) 416-0190
601 HIGH TECH COURT
GREER, SC 29650
FAX# (864) 416-0195

PARTS LIST - CONTROL SECTION — 421210-015 C

QTY.	DESIG.	PART NO.	DESCRIPTION
Ⓑ 1		600528	Assem., Dial Plate, w/Sw. Assem.,EN1000,Consisting of:
Ⓑ 0		600528-001	Assem., Dial Plate, w/Sw. Assem. & Keylock, EN1000, Consisting of:
1	PCB1	600541	Assem., Switch, Sequence Control & Display Board
Ⓑ 0	SW1	600531-001	Assem., Switch, Keylock, Momentary, SPST
Ⓑ 1		540251	Illustrated Panel, Dial Plate, EN1000
Ⓒ 1		515104	Panel, Display Window, Red Filter, EN1000
1		565003	Hole Plug, 3/4" Diam., Black
1	PWR.LT.	305001	Lamp, Neon, Red, 230V
1	WLD.LT.	305002	Lamp, Neon, Clear, 230V
1	J2-J2	322326	Assem., Harness, Ctrl Bd. to Term. Bd.
1	J3	322325	Assem., Harness, Power, EN1000
Ⓒ 1	J4-RDE	322369-005	Assem., Harness, Control Board J4 to RDE Jack

PARTS LIST - CONTACTOR SECTION

Ⓒ EN1000-2200/RDH	EN1000-1800/RDH	EN1000-1200/RDH	EN1000-600 OBSOLETE	EN1000-300/RDH	DESIG.	PART NO.	DESCRIPTION
Ⓒ 1	1	1	1	1	TS1	335067	Terminal Strip, 10 Pin, (Part of J3 Harness)
#	#	#	#	#	TS7	335044	Terminal Strip, 2 Pin
+	+	+	+	+	TS8	335017	Terminal Strip, 2 Pin, (Part of 1800/2200A Cont. Assem's.)
1	1	1	1	1	T1	310001	Transformer, Control, (Part of J3 Harness)
1	1	1	1	1	T2	310002	Transformer, Sense, (Part of J3 Harness)
1	1	1	1	1	T3	311002	Transformer, Valve, 150VA
*	*	*	*	*	T3	311017	Transformer, Valve, 150VA, 575V
2	2	2	2	2	R70,71	225016	Resistor, Power, Surge, 500 Ohm, 100W
*	*	*	*	*	R74	600048	Assem., Resistor, Power, 2000 Ohm, 10W, (For 575V)
1	1	1	1	1	F1	308010	Fuseholder, 1 Pole, Mini, 600V
Ⓑ 1	1	1	1	1	F1	307024	Fuse, Control, 1/4A, FNQ-R-1/4 or KLDR-1/4
3	3	3	3	3	F6,7,8(PCB2)	307022	Fuse, 1 Amp, Slow Blow, 2AG, (Part of 410319)
1	1	1	1	1	(R70,71)	325024	Assem., Wire, Surge Resistor, 18 Ga., Black
2	2	2	2	2	(T3)	325149	Assem., Wire, Valve Transformer, 22 Ga., Black
			1	1		600520	Assem., Contactor, Thyristor, Air, 300A, 460/575V, w/TLS
		1				600610	Assem., Contactor, Thyristor, Water, 600A, 460/575V
	1					600598	Assem., Contactor, Thyristor, Water, 1200A, 460/575V
			1			600533-005	Assem., Contactor, SCR, Water, 1800A, 460/575V, w/TLS
1						600533-003	Assem., Contactor, SCR, Water, 2200A, 460/575V, w/TLS
		1	1			341040	Standoff, Insulator, 600/1200A Thyristor Contactor, L1
		1	1			325174	Assem., Wire, Contactor-L1 to Lug L1, 600/1200A Thyristor Cont.
			1			346004	Lug, Screw, 5/16 Bolt to 2/0 Wire, 600A Thyristor Contactor, H1
			1			346011	Lug, Screw, 1/4 Bolt to 2/0 Wire, 600A Thyristor Contactor, L1
		2				346002	Lug, Screw, 5/16 Bolt to 250 MCM (4/0) Wire,1200A Cont.,L1 & H1
1	1	1	1	1		346004	Lug, Screw, Chassis GND, 2/0 Wire
1	1	1	1	1	PCB2	410319	Assem., PCB, Terminal Strip Board, *INRDHPI000*
1	1	1	1	1	(PCB2)	510236	Plate, Mounting, Terminal Strip Board
				1		525035	Bracket, Mounting, 300A Thyristor Contactor
1	1					525136	Bracket, Mounting, 1800/2200A Contactors
		1	1			530021	Plate, Mounting, 600/1200A Contactors
1	1	1	1	1	TLS	300020	Switch, Temperature Limit, (N.C.), (Part of 300A Contactor & 1800/2200A Contactor Assem.'s)
X	X	X	X			900045	Hose, 3/8" I.D.
4	4	4	4			566010	Hose Clamp, 3/8" Hose
2	2	2	2			600179	Assem., Water Fitting, 3/8" Hose
*	*	*	*		WFS	600297	Assem., Water Flow Switch, 3/8" Hose
1	1	1	1	1		550014	Vault Closing Door Mechanism, "D/T/LS/LF" Cabinet
1	1	1	1	1		510247	Cabinet, Control, Style "D/T", w/CB
1	1	1	1	1		510248	Door, Cabinet, Control, Style "D/T"
				1		510247-005	Cabinet, Control, Style "D/T", w/CB, Modified for 300A Cont.
				1		510257	Cabinet, Control, Style "LS/LF", w/CB
				1		510258	Door, Cabinet, Control, Style "LS/LF"
△	△	△	△	△	C/B		Circuit Breaker, Pole, Amp, V, (See Note 12)
Ⓒ Ⓐ 1	1	1	1	1		700202	Manual, RDH Options
1	1	1	1	1		700120	Manual, EN1000
1	1	1	1	1		421183	Logic Diagram, EN1000 Control
Ⓑ 1	1	1	1	1		421210-015	Wiring Diagram, EN1000-Series/RDH. "D/T/LS/LF" Cabinet

△ Optional, See Note 12.
* Substitution or addition of parts when 575V control is specified.
\# Supplied when optional Shunt Trip (ST), 115V is specified.
\+ Optional Water Flow Switch Assembly & TS8. An additional Thirty-Six inches (36") of hose, P/N 900045 and two (2) hose clamps, P/N 566010 are to be supplied. See Note 9.
X For all contactors in "D/T" cabinet supply 39" of hose. For all contactors in "LS/LF" cabinet supply 60" of hose.

Ⓐ Ⓒ See Wiring Diagram #421274 for interconnection wiring from EN1000-Series/RDH. "D/T/LS/LF" Cabinet to EN1000 Single Contactor Remote Data Entry Control.

Ⓑ Ⓒ To convert a EN1000 Weld Control/Contactor Cabinet to an EN1000-Series/RDH control, see Manual 700202.

MANUFACTURING INSTRUCTIONS:
See Drawings #515112, #515114, #600552, & #600591 for Mechanical Assembly Instructions of EN1000 "LS/LF" Cabinet.
See Drawing #440190-001 for Mechanical Layout of "LS/LF" Cabinet Rear Panel.
See Drawing #440093 for Crating Instructions of "LS/LF" Cabinet.
See Drawing #600562 for Mechanical Layout/Assem. of EN1000 "D/T" Cabinet.
See Drawing #440366 for Inner Pack & Use Carton 3650016 for "D/T" Cabinet Packing Instructions.
See Drawing #440437 for Circuit Breaker to L1 Contactor Cable connections.
See Drawing #600526 for Layout/Assem. of Front Panel.

REV.	AUTH.	DESCRIPTION	DRWN BY DATE	CHK'D BY DATE
C	DCS 6/15/11	CHANGED DRWG. FROM ENRDHP1000-SERIES TO EN1000-SERIES/RDH.	DCS 6/15/11	DCS 6/15/11
B	ECN 2602 ECN 2631	IN TITLE BLOCK DRWG. & P/L-CTRL MODEL NUMBER DESC WERE CHANGED FROM "EN1000-SERIES" TO "EN1000-SERIES/RDH". IN DRWG & P/L:ADDED FIG P/N 307024 FROM 6-17-96 KLDR-1/4 WAS P/N 307018 BBS 6/10A. IN DRWG:ADDED REF NOTE "PRIOR TO 10-1-00".	DEC 2-24 03	DEC 2-24 03
	ECN 2544	IN DRWG:ADDED TORQUE LINE SCREWS TO 575 VAC T3 VALVE:ERR.ADDED A DASHED LINE SCREW TO 230/460 VAC T3 VALVE:ERR.ADDED REF NOTE "DASHED SCREWS PART OF 311002 AFTER 6-16-97. ..." ADDED REF NOTE "DASHED SCREWS PART OF 311017 AFTER 6-16-97...". & UPDATED REF NOTE "PRIOR TO 1-15-93...".		
A	ECN 2470	IN 300A,600A,1200A,1800A, & 2200A XTOR COLUMNS IN P/L:APP NOTE:700123 W/900528 & 311138 REPLACED RDE-BDE CABLE ASSEM 326035;326036-001, & 326035-002;IN DRWG BELOW P/L:ADDED REF NOTE "CUSTOMER ASSEMBLED RDE-BDE CABLE ASSEM.". IN TITLE BLOCK: DESC "EN1000 -1200/1800/2200 CONTACTORS" WAS "EN1000-1200/1800 -CONTACTORS". IN DRWG:ADDED REF NOTE "326035-001,326035-002" & UPDATED NOTE 14 "CTRL USED IN CONJUNCTION W/RDC CTRL...".	DEC 9-20 00	DEC 9-20 00

Ⓑ Ⓐ EN1000-300D,T,LS.LF/RDH
Ⓑ Ⓐ EN1000-600D,T,LS.LF/RDH
EN1000-1200D,T,LS.LF/RDH Ⓑ Ⓐ
EN1000-1800D,T,LS.LF/RDH Ⓑ Ⓐ
EN1000-2200D,T,LS.LF/RDH Ⓑ Ⓐ

REV.	AUTH.	DESCRIPTION	DRWN BY DATE	CHK'D BY DATE
—	—	ORIGINAL RELEASE		

ENTRON CONTROLS INC

SCALE	DATE	DRAWN BY	CHK'D BY	APPROVED BY
NONE	11-7-96	DEC	DEC 11-7-96	

TOLERANCE UNLESS SPECIFIED: ANGLES: ± 5° DECIMALS: ± .010 FRACTIONS: ± 1/64

REVISED — REV LTR: C — DATE: 6/15/11 DCS — APPROVED BY

WIRING DIAGRAM, EN1000-SERIES/RDH. "D/T/LS/LF" CABINET Ⓒ Ⓐ Ⓐ

NEXT ASSM/USED ON — DRAWING NUMBER: 421210-015 — REV: C

22X34 ENTRON 470046